


LISTEN.
THINK.
SOLVE.SM

POINT I/O

SELECTION GUIDE



1734 AND 1734D SERIES

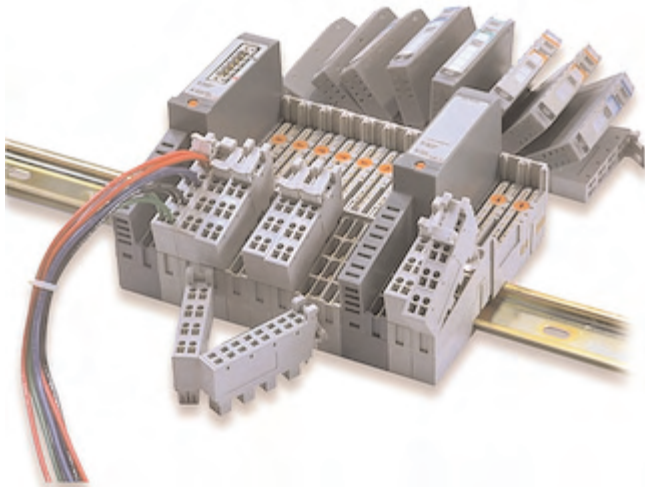


POINT I/O Family



The POINT I/O family has modular I/O modules that are ideal for applications where flexibility and low-cost of ownership are key for successful control system design and operation. As a key element in the Rockwell Automation Integrated Architecture, its comprehensive diagnostics and configurable features allow the product to be easily applied to any automation system and reduce engineering costs through standardization. It can be used in remote device panels, local control panels, and can be accessed from many locations including the Internet. This product has just-what-you-need granularity in 1 to 8 points to reduce system cost and size.

The POINT I/O System

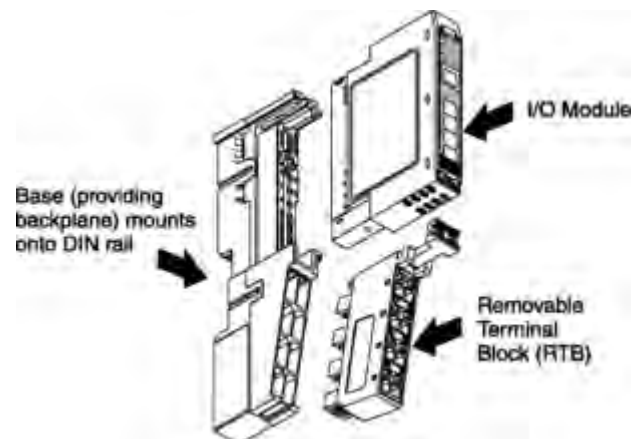

POINT I/O has 4 major components:

- **I/O modules** provide the field interface and system-interface circuitry
- **Communication interface modules** provide the network-interface circuitry
- **Terminal base units** provide the wiring and signal termination for field-side connections and system power for the backplane
- **Power distribution modules** provide the expandability of the POINT I/O system and the flexibility to mix a variety of signal types

1734 POINT I/O modules offer 1 to 8 points per module. The I/O modules are interfaced to a network through a communication interface, which includes a built-in power supply that converts incoming 24V dc power to 5V dc backplane power. Each type of communication interface supports a maximum of 13 to 17 I/O modules, with a maximum of 10 A field power. The I/O modules receive power from the power supply through the backplane. You can expand a POINT I/O assembly up to a maximum of 63 I/O modules or 504 channels.

1734D Series POINTBlock I/O provides a DeviceNet communication interface with up to 16 integrated I/O points in a single module. You can add up to 13 POINT I/O modules to a POINTBlock I/O assembly, for a maximum of 120 channels per assembly.

POINT I/O Features

- Highly modular design (1 to 8 point modularity)
- Broad application coverage
- Channel-level diagnostics (LED indicator and electronic)
- Channel-level alarm and annunciation (electronic)
- Parameter-level explicit messaging
- Removal and insertion under power (RIUP)
- Network solutions with multiple DeviceNet interfaces, ControlNet, EtherNet/IP, and PROFIBUS DP adapters
- Channel-level open-wire detection with electronic feedback
- Vertical mounting without derating
- 5 g vibration
- Channel-level short-circuit detection with electronic feedback
- Flash upgradable adapters
- Electronic and mechanical keying
- Robust backplane design
- Hot swapping of I/O modules
- Built-in DIN-rail grounding
- Mounting base provides continuous backplane and field bus power
- Color-coded module labels
- UL, C-UL, CE, C-Tick, DeviceNet, EEx certifications (as marked)
- Highly reliable structural integrity
- Optical isolation between field and system circuits

POINT I/O Product Compatibility

The following chart illustrates the compatibility of POINT I/O with other control platforms, especially within Rockwell Automation.

	1734-PDN	1734D	1734-ADN(X)	1734-ACNR	1734-AENT	1734-APB
PLC-5 with Network Port	IOD	IOD	IOD	NS	NS	NA
SLC 5/SLC 500 with Network Port	IOD	IOD	IOD	NS	NS	NA
PLC-5 Processor via Network Module	IOD	IOD	IOD	NS	NS	3
1756 Logix Communication Interface	IOD	IOD	IOD	IOD	IOD	3
PanelView Terminal	NA	NA	NA	NA	NA	NA
RSLinx Software	NA	NA	NA	NA	NA	NA
1769-L20, -L30 Controller with 1761-NET Interface	NA	NA	NA	NS	NS	NA
1769-L35E	NA	NA	NA	NA	IOD	NA
SoftLogix 5800	IOD	IOD	IOD	IOD	IOD	IOD
PC with RSLinx Only	NS	NS	NS	NS	NS	NA

IOD = I/O Data
 NS = Not Supported
 NA = Not Applicable
 3 = Requires third party scanner module

For information regarding POINT I/O on different networks, please refer to the Selecting a Network Interface section in this document.

Communication Considerations

POINT I/O features are impacted by your network choice.

Network	Impact
DeviceNet 1734-PDN or 1734D POINTBlock I/O	<p>Each POINT I/O module will count as a node on the main DeviceNet network.</p> <p>Total POINTBus backplane current of I/O modules cannot exceed 1.3 A for the 1734-PDN or 1.0 A for a 1734D module.</p> <p>Expansion power supplies may not be used.</p>
DeviceNet 1734-ADN(X)	<p>The 1734-ADNX expansion network port allows for a DeviceNet subnet.</p> <p>A total of 63 POINT I/O modules can be assembled on a single DeviceNet node.</p> <p>Expansion power supplies may be used to provide additional POINTBus backplane current.</p>
ControlNet 1734-ACNR	<p>A total of 63 POINT I/O modules can be assembled on a single ControlNet node.</p> <p>Expansion power supplies may be used to provide additional POINTBus backplane current.</p> <p>Up to 25 direct connections and 5 rack connections are allowed.</p>
EtherNet/IP 1734-AENT	<p>A total of 63 POINT I/O modules can be assembled on a single EtherNet/IP node.</p> <p>Expansion power supplies may be used to provide additional POINTBus backplane current.</p> <p>Refer to the User Manual to determine the ratings for direct and rack connections allowed.</p>
PROFIBUS DP 1734-APB	<p>A total of 63 POINT I/O modules can be assembled on a single PROFIBUS DP node.</p> <p>Expansion power supplies may be used to provide additional POINTBus backplane current.</p>

Specify a POINT I/O System

Follow these steps as you specify your POINT I/O system:

✓	Step	Remember to Select
	<p>1 Select a communication interface</p> <p>Choose the interface module for your operating system.</p>	<ul style="list-style-type: none"> the appropriate interface module a communication interface that meets the power requirements of your system
	<p>2 Select I/O devices based on field devices</p> <ul style="list-style-type: none"> location of the device number of points needed appropriate catalog number number of points available per module number of modules 	<ul style="list-style-type: none"> I/O modules - some have diagnostic features, electronic fusing, isolated inputs/outputs, and unique configurable features
	<p>3 Select a wiring base assembly</p> <p>Choose the appropriate wiring base assembly with removable terminal block for your modules.</p>	<ul style="list-style-type: none"> the appropriate wiring base assembly
	<p>4 Select optional power components</p> <p>Choose optional components to extend backplane power or change the field power distribution source.</p>	<ul style="list-style-type: none"> additional power components as necessary adequate power capacity to meet I/O module backplane current requirements
	<p>5 Select optional accessories</p> <p>Choose the marker kit as necessary.</p>	<ul style="list-style-type: none"> the marker kit, if necessary
	<p>6 Determine mounting requirement</p> <p>Determine needed dimensions based on the communication interface chosen.</p>	<ul style="list-style-type: none"> the appropriate number of DIN-rails based on the number of modules and the physical locations of those modules horizontal or vertical mounting with no thermal derating

Step 1 - Select:

- *a communication interface module*


Select POINT I/O Communication Interfaces

Separate communication interface adapters are available for different networks. Install adapters into the POINTBus backplane to allow POINT I/O modules to communicate with a controller.

NetLinX Architecture

NetLinX open network architecture is the Rockwell Automation strategy of using open networking technology for seamless, top-floor to shop-floor integration. The networks in the NetLinX architecture — DeviceNet, ControlNet, and EtherNet/IP — speak a common language and share a universal set of communication services. NetLinX architecture, part of the Integrated Architecture, seamlessly integrates all the components in an automation system from a few devices on one network to multiple devices on multiple networks including access to the Internet — helping you to improve flexibility, reduce installation costs, and increase productivity.

- The EtherNet/IP network is an open industrial standard that supports implicit and explicit messaging and uses commercial, off-the-shelf Ethernet equipment and physical media.
- The ControlNet network allows intelligent, high-speed control devices to share the information required for supervisory control, work-cell coordination, operator interface, remote device configuration, programming, and troubleshooting.
- The DeviceNet network offers high-speed access to plant-floor data from a broad range of plant-floor devices and a significant reduction in wiring.

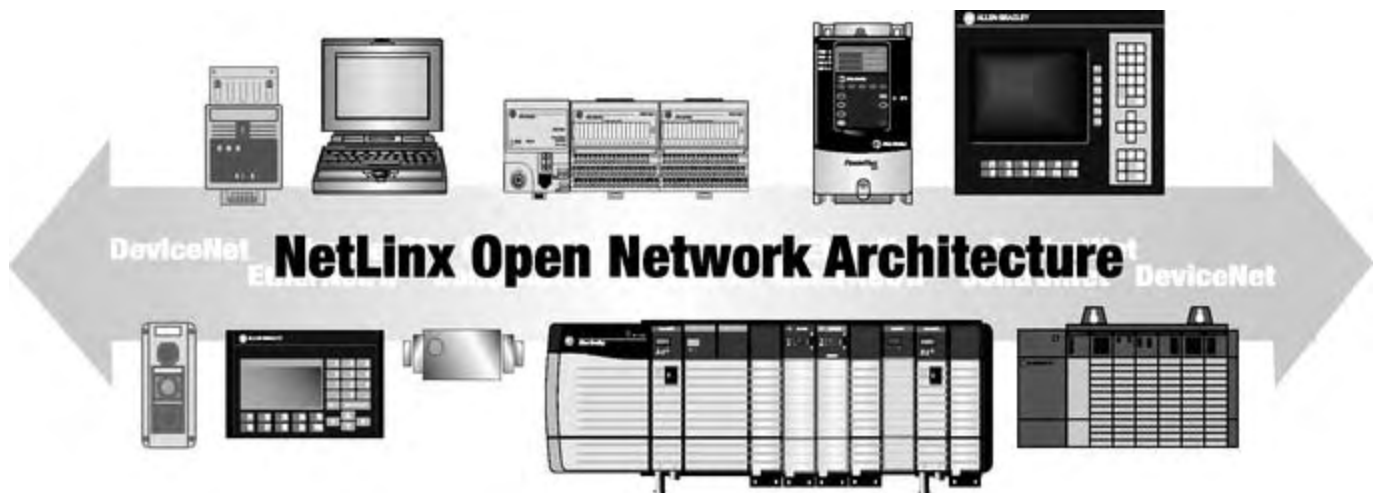

Select a Network

You can configure your system for information exchange between a range of devices and computing platforms and operating systems.

Application Requirements	Network	Select
<ul style="list-style-type: none"> Plant management (material handling) Configuration, data collection, and control on a single, high-speed network Time-critical applications with no established schedule Data sent regularly Internet/Intranet connection 	EtherNet/IP	1734-AENT
<ul style="list-style-type: none"> High-speed transfer of time-critical data between controllers and I/O devices Deterministic and repeatable data delivery Media redundancy Controller redundancy Intrinsic safety Redundant controller systems 	ControlNet	1734-ACNR
<ul style="list-style-type: none"> Connections of low-level devices directly to plant-floor controllers, without interfacing them Data sent as needed More diagnostics for improved data collection and fault detection Less wiring and reduced start-up time than a traditional, hard-wired system 	DeviceNet	1734-PDN 1734D 1734-ADN(X)
<ul style="list-style-type: none"> Connecting to an existing PROFIBUS DP 5 m (16.4 ft) bus, 12 MB network 	PROFIBUS	1734-APB

About the ControlNet Network


The 1734-ACNR adapter provides high-speed transfer of time critical data between controllers and I/O devices. It manages data transfers between controllers on the ControlNet network and POINT I/O modules plugged into the POINTBus backplane. The ControlNet network, a communication architecture, allows the exchange of messages between ControlNet products compliant with the ControlNet International specification. The 1734-ACNR adapter features include a variety of control system solutions, local communication network access through the network access port (NAP), and redundant media. It requires Series C POINT I/O modules or later.

The 1734-ACNR adapter requires a typical 24V dc power supply with a maximum of 10.2 W of power. It provides a maximum backplane current of 1.0 A @ 5V dc. Backplane current can be extended beyond 1.0 A with a 1734-EP24DC backplane extension power supply. The 1734-EP24DC can supply up to an additional 1.3 A of backplane current. Multiple 1734-EP24DC power supplies can be used to reach the maximum limit of 63 POINT I/O modules if 25 or fewer of these modules are analog or specialty modules.

The adapter supports 25 direct and 5 rack I/O connections to the POINT I/O modules. From a single 1734-ACNR adapter, multiple controllers establish I/O connections, up to a maximum of 5 rack I/O connections per adapter. Direct connections must be used with analog and specialty modules. Multiple rack connections permit multiple controllers to connect to I/O over a single 1734-ACNR adapter. The number of connections that can be supported on a network depends on the ControlNet parameters (NUT, RPI, and API) and the POINT I/O configuration by itself (number and types of I/O modules).

The following example shows a single POINT I/O ControlNet adapter with 5 connections and 8 I/O modules. The POINT I/O modules are monitored by the 5 controllers on the ControlNet network. The POINT I/O modules in:

- slots 1, 3, and 5 are controlled by the first controller.
- slots 2 and 4 by the second controller.
- slot 6 by the third controller.
- slot 7 by the fourth controller.
- slot 8 by the fifth controller.

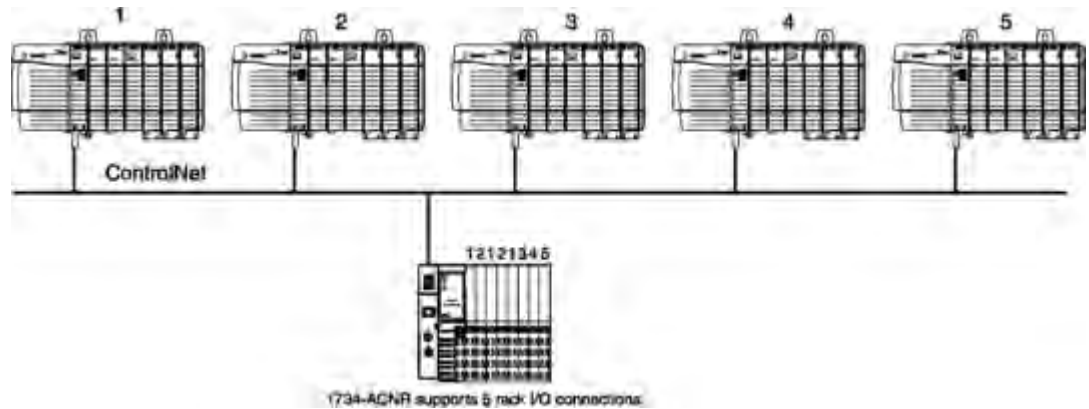

When using I/O modules with large amounts of data, it is important to be aware of the 1734-ACNR adapter's data capability. The 1734-ACNR adapter has 586 bytes of memory available for scheduled transmit data. When developing an application, the amount of data used by an individual connection must also include a small amount of overhead (I/O bytes per connection).

The following formula tracks the amount of available scheduled transmit data.

$$\text{Available Memory} = 586 - [(\text{Number of connections} * 10) + \text{Sum of all connection sizes}]$$

In the following example, the system uses a 1734-ACNR adapter with five 1734-232ASC modules.

	Application Data Size (number of bytes)	Memory Required
1734-232ASC - 1	100	110
1734-232ASC - 2	88	98
1734-232ASC - 3	96	106
1734-232ASC - 4	96	106
1734-232ASC - 5	92	102
Total Bytes Used	472	522

In this example, a sixth module could be added if it used less than 54 bytes of application data. There are 64 bytes of memory left. $64 = 586 - [(5 * 10) + 472]$

For more information about the 1734-ACNR adapter, see the POINT I/O ControlNet Adapter User Manual, publication 1734-UM008.

Select the DeviceNet Communication Interface

The POINT I/O family offers four interfaces for connecting to the DeviceNet network. Refer to the following table.

For These Features	Remember	Select
<ul style="list-style-type: none"> • Cost-effective • Electrically connects the main network to the I/O modules, which are connected on the POINTBus backplane • Each I/O module counts toward the allowable limit of 63 nodes on the main network • No configuration to the 1734-PDN communication interface necessary since it is transparent to the main network 	<ul style="list-style-type: none"> • Each POINT I/O module on the main network counts as a separate node. • Network distance limitations. • A POINT I/O expansion power supply is not permitted. 	1734-PDN
<ul style="list-style-type: none"> • Acts like a 1734-PDN communication interface, but uses a DeviceNet node number for the built-in 8 inputs and 8 outputs • Appears to the main network as a 1734-PDN communication interface with a single, 16-point module attached • Any of the I/O modules may be attached in the same manner they are added to a 1734-PDN communication interface 		1734D Series
<ul style="list-style-type: none"> • Behaves as a slave device on the main network and a master on the POINTBus backplane • Allows a group of I/O modules on the subnet to act as a single node on the main network • RSNetWorx for DeviceNet software is needed for configuration of the 1734-ADN adapter on the main network and the POINTBus backplane • Configuration on the POINTBus backplane consists of a scan list that is very similar to those used in all of the DeviceNet master scanner modules 	<ul style="list-style-type: none"> • All POINT I/O modules count as a single node on the main network. • The main network distance is acceptable. • POINT I/O expansion power supplies are permitted to add more POINT I/O modules. 	1734-ADN
<ul style="list-style-type: none"> • Acts like a 1734-ADN adapter, with additional capabilities • Has a second, Phoenix-style connector that extends the subnet off the module, so that any DeviceNet-capable device could be connected to a subnet and scanned by the 1734-ADNX adapter • Node numbers of the devices on the POINTBus backplane and subnet would not count against the 63 slave nodes allowed on the main network • Data from these devices would be included in the data being sent to/from the 1734-ADNX adapter on the main network • Network on the second connector is electrically isolated from the main network and can be used to extend the total DeviceNet trunk line distance <p>For example: with thick round media at 125 Kbps, you could run a maximum of 500 m (1640 ft) to a 1734-ADNX adapter on the main network. You could then wire an additional 500 m (1640 ft) of cable on the subnet connector and double the distance of the network. Remember that this subnet needs terminating resistors and a 24V dc power connection, the same as any other DeviceNet network.</p>	<ul style="list-style-type: none"> • All POINT I/O modules, and some third-party field devices, count as a single node on the main network. • Devices on the subnet and the main network need to be connected at different communication rates or use different sampling methods (for example, change-of-state or polled). • The main network distance is not acceptable and additional distance is required. • An expansion power supply may be required to add more modules. • POINT I/O expansion power supplies are permitted. 	1734-ADNX

With the introduction of the 1734-232ASC module, the amount of data to be transferred over the subnet could become substantial. This could also occur with the 1734-ADNX adapter and the standard DeviceNet devices connected to its subnet connector. It is important that the total amount of data coming from the subnet does not exceed the data capability of either the 1734-ADN or 1734-ADNX adapter.


- 250 bytes (248 data + 2 bytes command info) for output data (used as either COS, cyclic, or poll)
- 250 bytes (248 data + 2 bytes status info) for polled input data
- 250 bytes (248 data + 2 bytes status info) for COS/cyclic input data
- 8 bytes (6 data + 2 status info) for strobe input data

The data coming through the 1734 adapter combined with the other data from the main network cannot exceed the data capability of the main network master scanner. If this occurs, you will need multiple master scanners on the main network and the I/O modules on the subnet will need to be split between multiple 1734-ADN or 1734-ADNX adapters. With the 1734-PDN communication interface, the multiple masters on the main network will be able to communicate to separate groups of modules on its subnet through the same 1734-PDN communication interface, so no additional adapter would be necessary.

About the EtherNet I/P Network

The 1734-AENT adapter supports direct- and rack-optimized connections. A direct connection is a real-time data transfer link between the controller and whatever module occupies the slot that the configuration data references. Direct-connection messaging occurs at a cyclic rate specified by the requested packet interval (RPI) during configuration. A rack-optimized connection is a grouping of data from more than one I/O module into a single block of data sent over a single connection at the same data rate. Rack-optimized connections reduce the total number of connections needed to transfer data when using many I/O modules in a system.

Assume a system contains 8 digital I/O modules interfaced to a 1734-AENT adapter. If you used direct connections to transfer data to each of these modules, you need 8 connections — one to each of the 8 I/O modules. If you use a rack-optimized connection to transfer the data, you need only a single connection — the connection to the 1734-AENT adapter.

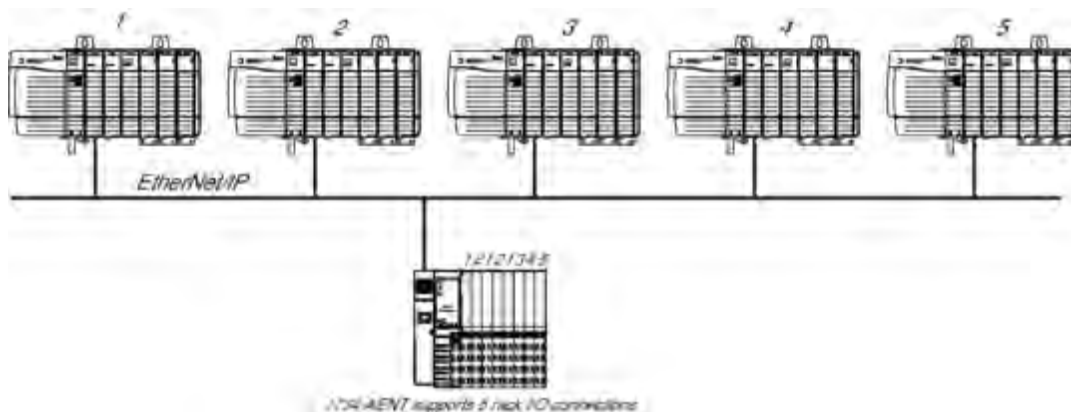

About the 1734D Series


The 1734D series is a set of DIN-rail mounted products with an integrated DeviceNet communication interface, various combinations of onboard I/O points, removable terminations, and a POINTBus expansion port.

The DeviceNet interface presents the integrated I/O as a single DeviceNet node while expansion I/O modules will appear as separate nodes.

The 1734D series includes a nonisolated DeviceNet communication interface. The 24V dc from the DeviceNet connection powers a nonisolated dc/dc converter that generates +5V dc. This +5V dc powers the 1734D series electronics and connects to the PointBus port to power the expansion I/O electronics.

Connect whatever field power you supply to the internal field-power bus. **For example, if 120V ac is applied to the power connections, there will be 120V ac applied to the modules through the internal field-power bus.** POINT I/O modules to the right of the 1734D products will also have that internal power bus voltage applied, unless you use a 1734-FPD to interrupt and change the field power-bus voltage.

POINTBlock I/O Typical Wiring

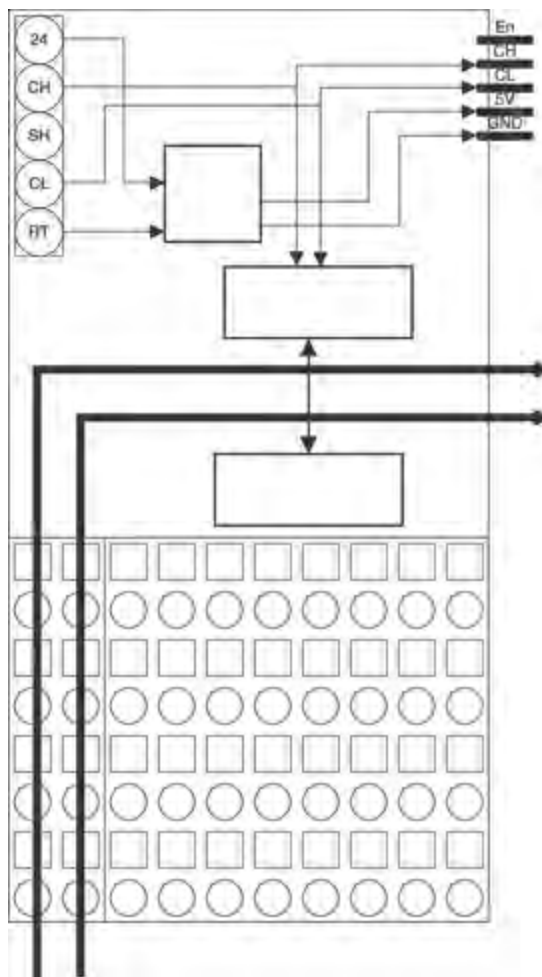

Some POINT I/O modules are isolated from the field bus power. Be sure to check the I/O module wiring diagram and user manual to determine actual power source wiring requirements.

Cat. No.*	Description
1734D-IA16(S)	120V ac 16 Input Module, Cage-clamp
1734D-IB16(S)	12/24V dc 16 Input Module, Cage-clamp
1734D-IB8XOB8E(S)	24V dc 8 Input/8 Output Module, Cage-clamp
1734D-IB8XOW8(S)	24V dc 8 Input/8 N.O. Relay Module, Cage-clamp
1734D-IA8XOA8(S)	120V ac 8 Input/8 Output Module
1734D-IA8XOW8(S)	120V ac 8 Input/8 N.O. Relay Module, Cage-clamp


*Catalog numbers ending in S indicate the spring-clamp style.

Step 2 - Select:

- *I/O modules - some modules have diagnostic features, electronic fusing, or individually isolated inputs/outputs*

Select POINT I/O Modules

The POINT I/O family provides a wide range of input and output modules to span many applications, from high-speed digital to process control. POINT I/O modules support producer/consumer technology, which allows input information and output status to be shared among multiple Logix controllers.

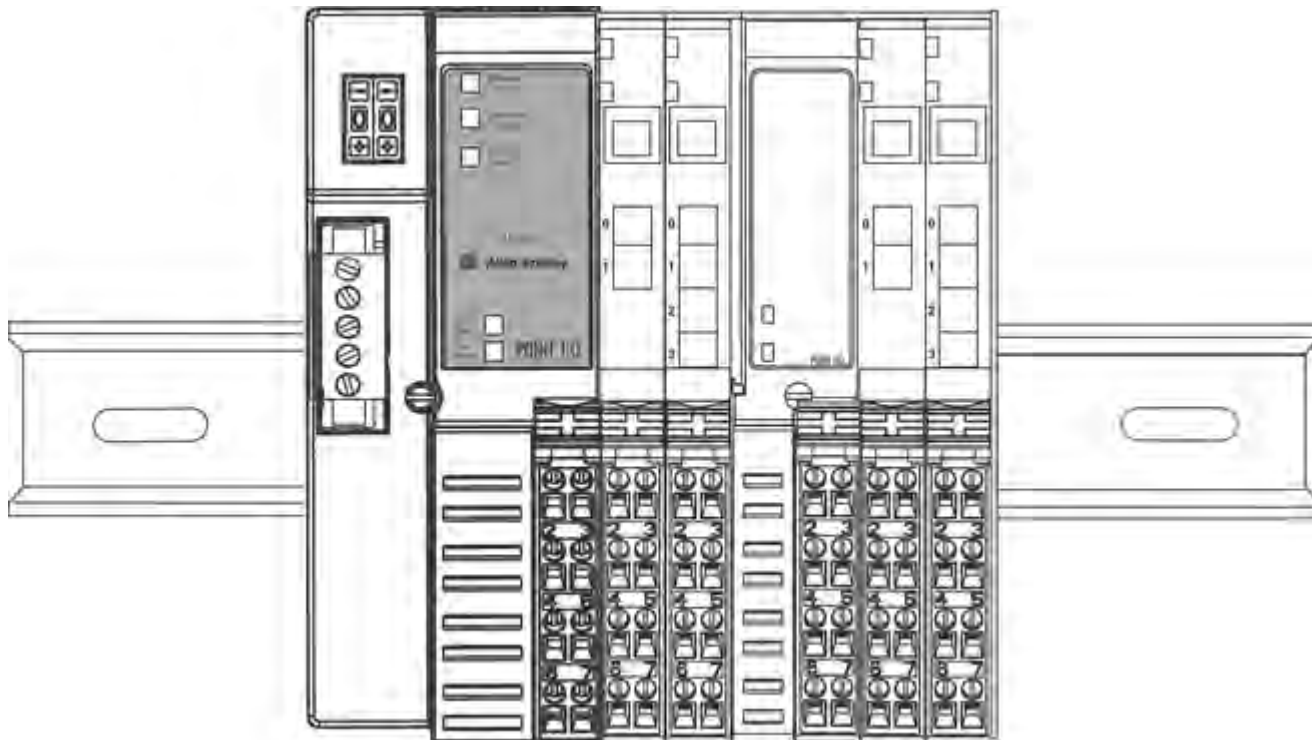

Each POINT I/O module mounts adjacent to the network adapter or another I/O module and removable terminal block (RTB) to connect all field-side wiring. The RTBs are part of the terminal base assembly (1734-TB, 1734-TB3, 1734-TBS, 1734-TB3S, 1734-TBCJC). They are not included with the I/O modules and must be ordered separately.

The POINT family of I/O modules includes:

- 1734 digital I/O modules.
- 1734 analog I/O modules.
- 1734 specialty I/O modules.
- 1734 wiring systems.
- 1734 network communication adapters.

Digital I/O Modules

Choose digital I/O modules when you need:

- **Input modules.**

An input module responds to an input signal in the following manner:

- Input filtering limits the effect of voltage transients caused by contact bounce and/or electrical noise. If not filtered, voltage transients could produce false data. All input modules use input filtering.
- Optical isolation shields logic circuits from possible damage due to electrical transients.
- Logic circuits process the signal.
- An input LED indicator turns on or off indicating the status of the corresponding input device.

- **Output modules.**

An output module controls the output signal in the following manner:

- Logic circuits determine the output status.
- An output LED indicator indicates the status of the output signal.
- Optical isolation separates module logic and bus circuits from field power.
- The output driver turns the corresponding output on or off.

- **Surge suppression.**

Most output modules have built-in surge suppression to reduce the effects of high-voltage transients. However, we recommend that you use an additional suppression device if an output is being used to control inductive devices, such as:

- relays.
- motor starters.
- solenoids.
- motors.

Additional suppression is especially important if your inductive device is in series with or parallel to hard contacts, such as push buttons or selector switches.

The 1734 digital I/O modules support:

- a wide variety of voltage interface capabilities.
- isolated and non-isolated module types.
- point-level output fault states.
- choice of direct-connect or rack-optimized communications.
- field-side diagnostics on select modules.

Digital AC Input Modules

	1734-IA2	1734-IM2
Number of Inputs	2	
Voltage, On-State Input, Nom.	120V ac	220V ac
Voltage, On-State Input, Min.	65V ac	159V ac
Voltage, On-State Input, Max.	132V ac	264V ac
Input Delay Time, ON to OFF, Hardware Delay, Max.	20 ms hardware filter plus 0...65 ms digital filter programmable in increments of 1 ms*	
Current, On-State Input, Min.	3.7 mA	5.7 mA
Input Impedance, Nom.	10.6 k Ω	22.3 k Ω
Current, Off-State Input, Max.	2.5 mA	2.9 mA
Terminal Base Unit	1734-TB or 1734-TBS	
PointBus Current (mA)	75	
Power Dissipation, Max.	0.7 W @ 28.8V dc	

*Input ON-to-OFF delay time is the time from a valid input signal to recognition by the module.

Digital AC Output Module

	1734-OA2
Number of Outputs	2
Voltage, On-State Output, Nom.	120V ac, 220V ac
Voltage, On-State Output, Min.	74V ac
Voltage, On-State Output, Max.	264V ac
Output Current Rating	1.5 A (2 channels @ 0.75 A each)
Terminal Base Unit	1734-TB or 1734-TBS
PointBus Current (mA)	75
Power Dissipation, Max.	0.8 W @ 28.8V dc

Digital DC Input Modules

	1734-IB2	1734-IB4	1734-IB8	1734-IV2	1734-IV4	1734-IV8
	Sinking Input Modules			Sourcing Input Modules		
Number of Inputs	2	4	8	2	4	8
Voltage, On-State Input, Nom.	24V dc					
Voltage, On-State Input, Min.	10V dc					
Voltage, On-State Input, Max.	28.8V dc					
Input Delay Time, ON to OFF	0.5 ms hardware + (0...65 ms selectable)*					
Current, On-State Input, Min.	2 mA					
Current, On-State Input, Max.	5 mA					
Current, Off-State Input, Max.	1.5 mA					
Terminal Base Unit	1734-TB or 1734-TBS	1734-TB, 1734-TBS, 1734-TB3, or 1734-TB3S*	1734-TB or 1734-TBS	1734-TB or 1734-TBS	1734-TB, 1734-TBS, 1734-TB3, or 1734-TB3S*	1734-TB or 1734-TBS
PointBus Current (mA)	75					
Power Dissipation, Max.	0.7 W @ 28.8V dc	1.0 W @ 28.8V dc	1.6 W @ 28.8V dc	0.7 W @ 28.8V dc	1.0 W @ 28.8V dc	1.6 W @ 28.8V dc
Thermal Dissipation, Max.	2.4 BTU/hr @ 28.8V dc	3.4 BTU/hr @ 28.8V dc	5.5 BTU/hr @ 28.8V dc	2.4 BTU/hr @ 28.8V dc	3.4 BTU/hr @ 28.8V dc	5.5 BTU/hr @ 28.8V dc

*Input ON-to-OFF delay time is the time from a valid input signal to recognition by the module.

*1734-TB3 or 1734-TB3S recommended.

Digital DC Output Modules

	1734-OB2*	1734-OB2E	1734-OB2EP	1734-OB4*	1734-OB4E	1734-OB8*	1734-OB8E	1734-0V2E	1734-0V4E	1734-0V8E
	Sourcing Output Modules							Sinking Output Modules		
Number of Outputs	2		4		8		2		4	8
Voltage, On-State Output, Nom.	24V dc									
Voltage, On-State Output, Min.	10V dc									
Voltage, On-State Output, Max.	28.8V dc									
Output Current Rating, Max.	2.0 A per module, 1.0 A per channel		4.0 A per module, 2.0 A per channel		3.0 A per module, 1.0 A per channel		2.0 A max per module, 1.0 A per output		3.0 A per module, 1.0 A per output	3.0 A per module, 1.0 A per channel
Terminal Base Unit	1734-TB or 1734-TBS									
PointBus Current (mA)	75									
Power Dissipation, Max.	0.8 W @ 28.8V dc		3.4 W @ 28.8V dc	1.2 W @ 28.8V dc		2.0 W @ 28.8V dc		0.8 W max @ 28.8V dc	1.2 W max @ 28.8V dc	2.0 W max @ 28.8V dc

* Non-diagnostic, standard output modules.

Digital Contact Output Modules

	1734-0W2	1734-0W4	1734-0X2
Number of Outputs	2 Form A (N.O.) relays, non-isolated or isolated	4 Form A (N.O.) relays, isolated	2 Form C (N.O./N.C.) relays, isolated
Output Delay Time, ON to OFF, Max.	26 ms*		10 ms*
Contact Resistance, Initial	30 mΩ		
Leakage Current, Off-State Output, Max	1.2 mA and bleed resistor thru snubber circuit @ 240V ac		2.0 mA and bleed resistor thru snubber circuit @ 240V ac
Terminal Base Unit	1734-TB or 1734-TBS		
PointBus Current (mA)	80		100
Power Dissipation, Max.	0.5 W		

*Time from valid output off signal to relay deenergization by module.

Digital POINTBlock AC/DC Modules

	1734D-IA16, 1734D-IA16S	1734D-IA8X0A8, 1734D-IA8X0A8S	1734D-IA8X0W8, 1734D-IA8X0W8S	1734D-IB16, 1734D-IB16S	1734D-IB8X0B8E, 1734D-IB8X0B8ES	1734D-IB8X0W8, 1734D-IB8X0W8S
Number of Inputs	16	8	8	16	8	8
Number of Outputs	—	8	8	—	8	8
Voltage, On-State Input, Nom.	120V ac	120V ac	120V ac	24V dc	24V dc	24V dc
Input Delay Time, ON to OFF	20.0 ms hardware + (0...65 ms selectable)	20.0 ms hardware + (0...65 ms selectable)	20.0 ms hardware + (0...65 ms selectable)	0.5 ms hardware + (0...65 ms selectable)	0.5 ms hardware + (0...65 ms selectable)	0.5 ms hardware + (0...65 ms selectable)
Current, On-State Input, Min.	5.0 mA	5.0 mA	5.0 mA	2.5 mA	2.5 mA	2.5 mA
Current, On-State Output, Min.	—	10 mA per output	10 mA per output	—	—	10 mA per output
PointBus Current (mA)	1000	1000	1000	1000	1000	1000
Power Dissipation, Max.	2.0 W @ 24V dc	2.0 W @ 24V dc	2.0 W @ 24V dc	2.0 W @ 24V dc	2.0 W @ 24V dc	2.0 W @ 24V dc

Analog, Thermocouple, and RTD I/O Modules

The POINT I/O analog and temperature I/O modules support: on-board, channel-level data alarming (four set-points per channel); scaling to engineering units; channel-level diagnostics (electronic bits and LED indicators); and integer format.

Choose analog, thermocouple, or RTD I/O modules when you need:

- **Individually configurable channels of POINT I/O for use with a variety of sensors.**
- **On-board scaling** eliminates the need to scale the data in the controller. Controller processing time and power are preserved for more important tasks, such as I/O control, communications, or other user-driven functions.
- **Online configuration.** You can configure modules in the Run mode by using the programming software or the control program. This lets you change configuration while the system is operating. For example, the input filter for a particular channel could be changed, or a channel could be disabled based on a batch condition. **To use this feature, the controller and network interface must also support this feature.**
- **Over- and under-range detections and indications** eliminate the need to test values in the control program, saving valuable processing power of the controller. In addition, since alarms are handled by the module, the response is faster and only a single bit per channel is monitored to determine if an error condition has occurred.
- **Ability to direct output device operation during an abnormal condition.** You can individually configure each channel of the output module to hold its last value or assume a user-defined value on a fault condition. This feature lets you set the condition of your analog devices, and therefore your control process, which may help to ensure a reliable shutdown.
- **Ability to individually enable and disable channels.** Disabling unused channels improves module performance.
- **Selectable input filters** lets you select from several different filter frequencies for each channel that best meets the performance needs of your application based on environmental limitations. Lower filter settings provide greater noise rejection and resolution. Higher filter settings provide faster performance. **The analog modules provide four input filter selections; RTD and thermocouple modules provide six.**
- **Selectable response to broken input sensor.** This feature provides feedback to the controller that a field device is not connected or operating properly. This lets you specify corrective action based on the bit or channel condition.
- **High Accuracy.** The modules share a high accuracy rating of $\pm 0.1\%$ of full-scale accuracy @ 25 °C (77 °F).

Analog Input Modules

	1734-IE2C	1734-IE2V	1734-IR2*	1734-IT2I*
Number of Inputs	2			
Input Signal Range	4...20 mA 0...20 mA	0...10V ±10V	0...600 Ω	±75 mV
Input Resolution, Bits	16 bits - over 21 mA 0.32 µA/cnt	15 bits plus sign 320 µV/cnt in unipolar or bipolar mode	16 bits - 9.5 mV per count 0.03 °C per count (pt 385 @ 25 °C)	15 bits plus sign 2.5 mV per count*
Data Format	Signed integer			
Absolute Accuracy, Analog Inputs	Current Input: 0.1% Full Scale @ 25 °C‡	Voltage Input: 0.1% Full Scale @ 25 °C‡§	Current Input: 0.1% Full Scale @ 25 °C Voltage Input: 0.1% Full Scale @ 25 °C‡	Voltage Input: 0.1% Full Scale @ 25 °C‡
Accuracy Drift w/Temp., Analog Inputs	Current Input: 30 ppm/°C		—	
Input Step Response, per Channel	70 ms @ Notch = 60 Hz (default) 80 ms @ Notch = 50 Hz 16 ms @ Notch = 250 Hz 8 ms @ Notch = 500 Hz		—	
Input Conversion Type	Delta Sigma			
Terminal Base Unit	1734-TB or 1734-TBS			1734-TBCJC
PointBus Current (mA)	75		220	175
Keyswitch Position	3		6	
Power Dissipation, Max.	0.6 W @ 28.8V dc	0.75 W @ 28.8V dc	1.0 W	

* Analog and temperature input modules support the following configurable parameters and diagnostics:

- open-wire detection with LED and electronic reporting
- four-alarm and annunciation set-points: low alarm; high alarm; low/low alarm; high/high alarm
- calibration mode detection and electronic reporting
- under-range detection and electronic reporting
- over-range detection and electronic reporting
- channel signal range and on-board scaling (scaling to any 16-bit integer under-/over-range alarms)
- filter type (notch for A/D, or first-order low-pass digital filter)
- temperature scale (Celsius, Fahrenheit, Kelvin, Rankine, or custom)
- channel update rate (step response plus 0-10,000 ms filter setting)

*Also see thermocouple type.

‡Includes offset, gain, non-linearity and repeatability error terms.

§Includes offset, gain, non-linearity and repeatability error terms.

Analog Output Modules

	1734-0E2C	1734-0E2V
Number of Outputs	2	
Output Signal Range	4...20 mA 0...20 mA	0...10V ±10V
Output Resolution, Bits	13 bits - over 21 mA 2.5 µA/cnt	14 bits (13 plus sign) 1.28 mV/cnt in unipolar or bipolar mode
Data Format	Signed integer	
Absolute Accuracy, Analog Outputs	Current Output: 0.1% Full Scale @ 25 °C*	Voltage Output: 0.1% Full Scale @ 25 °C*
Accuracy Drift w/Temp., Analog Outputs	Current Output: 30 ppm/°C	
Step Response to 63% of FS, Current Output	24 µs	
Step Response to 63% of FS, Voltage Output	—	
Output Conversion Rate	16 µs	
Terminal Base Unit	1734-TB or 1734-TBS	
PointBus Current (mA)	75	
Keyswitch Position	4	
Power Dissipation, Max.	1.0 W @ 28.8V dc	

*Includes offset, gain, non-linearity and repeatability error terms.

*Includes offset, gain, non-linearity and repeatability error terms

Use Temperature Module Alarms

POINT I/O temperature modules can detect and communicate these electronic conditions:

- Over-range alarm
- Under-range alarm
- Level alarm (low-low, low, high, high-high)
- Open-wire alarm

Over-Range Alarm

The channel over-range alarm is set if the input is greater than the maximum temperature (thermocouple or RTD range dependent), millivolt (+75V) or resistance (600 Ω) range value, or above the maximum range of the thermocouple or RTD.

The cold-junction compensator has its own over-range alarm. If the CJC temperature goes above 70 °C (158 °F), the over-range alarm is set.

Under-Range Alarm

The channel under-range alarm is set if the input is less than the minimum temperature (thermocouple or RTD range dependent), millivolt (-75 mV) or resistance (10 Ω) range value, or below the minimum range of the thermocouple or RTD.

The cold-junction compensator has its own under-range alarm. If the CJC temperature goes below 0 °C (32 °F), the under-range alarm is set.

Level Alarms

There are four level alarms.

- Low
- Low-low
- High
- High-high

When the channel input goes below a low alarm or above a high alarm, a bit is set in the data table. All alarm status bits can be read individually or by reading the channel status byte (bits 2 to 5 for channel 0; bits 10 to 13 for channel 1).

Each channel alarm can be configured individually.

Cold-junction Compensation (1734-IT2I only)

Open-wire Alarm

The module has the ability to check for a broken or detached wire. In any mode, if a broken/detached lead is detected, the data value is forced to maximum and the over-range alarm is set. Once the alarm is issued, it remains active as long as the input signal is faulted.

When using thermocouples, cold-junction compensation is required at the termination of the thermocouple wire. Cold-junction can be accomplished in three ways:

- Enter an estimated temperature
- Use a 1734-TBCJC mounting base (recommended)
- Use external cold-junction compensators

Entering an estimated temperature is the least accurate way for cold-junction compensation. Using external compensators is the most expensive way, while using the 1734-TBCJC provides the easiest and most accurate method.

An open cold-junction compensator causes the input point to the maximum temperature value for the selected input type. This will cause an alarm to be set. Once the alarm is issued, it remains active as long as the input signal is faulted (above maximum).

Cold-junction Enable (1734-IT2I only)

Set this bit to enable or disable the cold-junction linearization. If enabled, the proper cold-junction compensation value will be applied to the selected thermocouple. If disabled, the data (CJ temperature) will still be available but not applied to the input. If the 1734-TBCJC is not available, this parameter should be set to disabled. A cold-junction value can be added using the cold-junction offset parameter.

You can select the type and amount of noise filtering on each individual channel.

- Notch filter of analog to digital converter
- First-order, low-pass digital filter

Choose the filter that provides you with the update and step response that most closely matches your system requirements.

Noise Filtering (1734-IR2 only)

POINT I/O Temperature Input Module Specifications

	1734-IR2	1734-IT2I
Input Resolution, Bits	16 bits	15 bits plus sign
Thermocouple Type and Resolution Average Over Span	—	Type B, 30...1820 °C, 3 counts/ °C Type C, 0...2315 °C, 6 counts/ °C Type E, -270...1000 °C, 24 counts/ °C Type J, -210...1200 °C, 21 counts/ °C Type K, -270...1372 °C, 13 counts/ °C Type N, -270...1300 °C, 11 counts/ °C Type R, -50...1768.1 °C, 4 counts/ °C Type S, -50...1768.1 °C, 4 counts/ °C Type T, -270...400 °C, 15 counts/ °C
Cold Junction Compensation	—	Included in 1734-RTB/CJ Remote Termination Block
Cold Junction Compensation Range	—	0...70 °C
Absolute Accuracy, Analog Inputs	Current Input: 0.1% Full Scale @ 25 °C Voltage Input: 0.1% Full Scale @ 25 °C*	
Input Update Rate, per Module	20 ms @ Notch = 50 Hz 17 ms @ Notch = 60 Hz (default) 10 ms @ Notch = 100 Hz 8 ms @ Notch = 120 Hz 5 ms @ Notch = 200 Hz 4 ms @ Notch = 240 Hz 3 ms @ Notch = 300 Hz 3 ms @ Notch = 400 Hz 2 ms @ Notch = 480 Hz	
Input Step Response, per Channel	60 ms @ Notch = 50 Hz 50 ms @ Notch = 60 Hz 30 ms @ Notch = 100 Hz 25 ms @ Notch = 120 Hz 15 ms @ Notch = 200 Hz 13 ms @ Notch = 240 Hz 10 ms @ Notch = 300 Hz 8 ms @ Notch = 400 Hz 6 ms @ Notch = 480 Hz	
Input Impedance	—	100 kΩ
Input Resistance	—	1 MΩ
Input Conversion Type	Delta Sigma	
Input Common Mode Rejection Ratio	120 dB	
Input Normal Mode Rejection Ratio	-100 dB -3 dB Notch filter: 13.0 Hz @ Notch = 50 Hz 15.7 Hz @ Notch = 60 Hz 26.2 Hz @ Notch = 100 Hz 31.4 Hz @ Notch = 120 Hz 52.4 Hz @ Notch = 200 Hz 62.9 Hz @ Notch = 240 Hz 78.6 Hz @ Notch = 300 Hz 104.8 Hz @ Notch = 400 Hz 125.7 Hz @ Notch = 380 Hz	-60 dB, -3 dB Notch filter: 13.1 Hz @ Notch = 50 Hz 15.7 Hz @ Notch = 60 Hz 26.2 Hz @ Notch = 100 Hz 31.4 Hz @ Notch = 120 Hz 52.4 Hz @ Notch = 200 Hz 62.9 Hz @ Notch = 240 Hz 78.6 Hz @ Notch = 300 Hz 104.8 Hz @ Notch = 400 Hz 125.7 Hz @ Notch = 380 Hz
Overvoltage Protection, Inputs	No input protection	Input not overvoltage protected
Input Calibration	Factory calibrated	
PointBus Current (mA)	220	175
Power Dissipation, Max.	1.0 W	1.0 W
Thermal Dissipation, Max.	3.3 BTU/hr	3.3 BTU/hr
Isolation Voltage	50V continuous (non-isolated, channel to channel)	50V continuous (isolated, channel to channel)
External DC Supply Voltage, Nom.	24V dc	—
External DC Supply Voltage Range	10...28.8V dc	—
External DC Supply Current, Nom.	15 mA @ 24V dc	—
Installation Instructions	1734-IN012	1734-IN002
User Manual	1734-UM004	1734-UM004

* Includes offset, gain, non-linearity and repeatability error terms.

Specialty I/O Modules

1734-232ASC and 1734-485ASC

The 1734-232ASC and 1734-485ASC serial-interface modules offer a serial-link communication interface solution for peripheral products with RS-232 (use the 1734-232ASC), RS-485, and RS-422 ports (use the 1734-485ASC). These modules allow a device with serial-interface output (for example, bar code readers) to communicate up to 128 bytes of ASCII data onto any network supported by the POINT I/O system. Each module is a single-channel, full-duplex interface and is rated for up to 38.4 Kbps. LED indicators on the modules offer diagnostics for the module, POINTBus backplane, and transmit/receive status indication.

1734-SSI

The 1734-SSI module collects serial data from industrial absolute-position encoding sensors that use standard SSI protocol. The SSI module is inserted into a POINT I/O terminal base that provides common power, communications, and wiring connections for the SSI sensors.

1734-ARM

With the release of higher density digital I/O modules, the POINT I/O system continues to expand into wider OEM and general purpose applications. Some OEMs and System Integrators prefer to design one modular system based on a single software project. Features are turned off in software depending on the module set the customer purchases.

The 1734-ARM address reserve module reserves address and slot numbers to maintain the numbering schemes of purchased I/O module sets. Non-parameterized, signal modules' structure and address location is retained when replaced with a signal module. The 1734-ARM has no module configuration and does not communicate I/O data.

1734-CTM and 1734-VTM

The 1734-CTM common terminal module and 1734-VTM voltage terminal module provide expansion of the termination capability of POINT I/O. The modules support higher density (8 channel) POINT I/O modules and management of wiring of field devices to the POINT I/O solution.

POINT I/O ASCII Module Specifications

	1734-232ASC, -485ASC
Number of Serial Channels	1
Keyswitch Position	2 (specialty)
PointBus Current (mA)	75
Power Dissipation	0.75 W @ 28.8V dc
Terminal Base Unit	1734-TB or -TBS
Serial Port Parameters	
Serial Character Framing	7N2, 7E1, 7O1, 8N1, 8N2, 8E1, 8O1, 7E2, 7O2
Serial Port Comm Speed	9600, 1200, 2400, 4800, 19.2 k, 38.4 k
Serial Port Receive from ASCII Device	
Number of Receive Chars, Max	1...128
Receive Record Start Mode	No, exclude, include start delimiter
Receive Start Delimiter	ASCII character
Receive Record End Mode	No, exclude, include end delimiter
Receive End Delimiter	ASCII character
Send (Produce) on DeviceNet to Master	
Receive String Data Type	Array, short_string, string
Pad Mode	Pad mode disabled, enabled
Pad Character	ASCII character
Receive Swap Mode	Disabled, 16-bit, 24-bit, 32-bit swap
DeviceNet Handshake Mode	Master/slave handshake, produce immediate
Produce Assembly Size	4...132
Serial Data Size	0...128 bytes
Receive Transaction ID	0...255
Serial Port Transmit to ASCII Device	
Number of Transmit Chars, Max	1...128
Transmit End Delimiter Mode	No, exclude, include end delimiter
Transmit End Delimiter Character	ASCII character
Consume on DeviceNet from Master	
Consume String Data Type	Array, short_string, string
Transmit Swap Mode	Disabled, 16-bit, 24-bit, 32-bit swap
DeviceNet Record Header Mode	Transmit handshake/immediate
Consume Assembly Size	4...132
Serial Port Transmit/Explicit Messages from Configuration Tool	
Transmit Serial Data String Size	0...128 bytes
Transmitted Serial Data Length	0...128 bytes
Transmit Transaction ID	0...255
Status	TX FIFO overflow, RX FIFO overflow, RX parity error, handshake error, new data flag

1734-SSI Module Specifications

	1734-SSI
Number of SSI Channels	1
Keyswitch Position	2
PointBus Current (mA)	110
Power Dissipation, Max.	0.94 W
Terminal Base Unit	1734-TB, 1734-TBS
Isolation Voltage	Isolation voltage (continuous-voltage withstand rating) 50V continuous, Tested to withstand 1100V dc for 60 s
External DC Power Supply Voltage, Nom.	24V dc
Encoder Type	Any absolute encoder supporting standard SSI protocol including linear, rotary, and optical distance measuring devices
SSI Data Rate	125 kHz, 250 kHz, 500 kHz, 1 MHz, 2 MHz (software selectable)
SSI Bits Per Word	2...31 (software selectable)
SSI Word Length	4 bytes (32 bits)
SSI Word Delay Time	16 μ s...64 ms (software selectable)*
SSI Features	Gray or binary code capable with gray to binary conversion, increasing or decreasing SSI count indication, 2 SSI word comparator values, SSI word latching with I1 input
SSI Cable Type	UL CM/AWM 2464/CSA Type CMG FT4 or similar cable utilizing shielded twisted pairs for D \pm and C \pm connections. See sensor manufacturer for actual cable required for the SSI sensor under use. I1 input can be wired separate from SSI cable.‡
SSI Cable Length	Depends on desired SSI data rate: 125 kHz...1050 ft (320m) 250 kHz...525 ft (160m) 500 kHz...195 ft (60m) 1 MHz...65 ft (20m) 2 MHz...25 ft (8m)
SSI Sensor Power (At V+/- Terminals)	10...28.8V dc common with field power voltage, 0.75A dc maximum with short circuit protection
SSI Clock Drive Current, Max. (Out of C+/- Terminals)	750 mA maximum
Input I1 Category/Type	Similar to IEC Type 3
Voltage, On-State Input, Min.	0V dc
Voltage, On-State Input, Max.	Field Power Supply Voltage minus 10V
Current, On-State Input, Min.	2 mA
Current, On-State Input, Nom.	4 mA (Field Power Supply Voltage = 24V dc)
Current, On-State Input, Max.	5 mA
Voltage, Off-State Input, Min.	Field Power Supply Voltage minus 5V
Voltage, Off-State Input, Max.	Equal to Field Power Supply Voltage
Current, Off-State Input, Max.	1.2 mA
Input Impedance, Nom.	3.6 k Ω
Input Impedance, Max.	4.7 k Ω
Input Filter Time, Nom.	0.5 ms
Field Power Bus Supply Voltage, Min.	10V dc
Field Power Bus Supply Voltage, Nom.	24V dc
Field Power Bus Supply Voltage, Max.	28.8V dc

*Time between successive SSI words (Tp). Also called Dwell Time.

‡Use this conductor category information for planning conductor routing as described in publication 1770-4.1, Industrial Automation Wiring and Grounding Guidelines.

1734-ARM Module Specifications

	1734-ARM
PointBus Current (mA)	75
Power Dissipation, Max.	0.375 W @ 5V dc
Thermal Dissipation, Max.	1.3 BTU/hr @ 5V dc
Keyswitch Position	Use the keyswitch position of the removed module
Terminal Base Unit	1734-TB, 1734-TBS

1734-CTM and 1734-VTM Module Specifications

	1734-CTM, 1734-VTM
PointBus Current (mA)	None
Power Dissipation, Max.	None
Thermal Dissipation, Max.	None
Keyswitch Position	5
Isolation Voltage	Tested to 1600V rms for 60 s
Field Power Bus Supply Voltage Range	10...28.8V dc, 120/240V ac
Field Power Bus Supply Current, Max.	2 A per point, 4 A module
Terminal Base Unit	1734-TB, 1734-TBS

POINT I/O Counter Modules

Choose the POINT I/O high-speed counters when you need:

- **Intelligent counter modules** with their own microprocessors and I/O that can react to high-frequency input signals up to 1 MHz.
- **Signals received at the inputs** are filtered, decoded, and counted.
- **Some modules can generate a pulse width modulated signal.** (1734-VHSC only)
- **Count and rate values** can be used to activate one or two embedded outputs in less than 1 ms (1734-VHSC only).
- **Signals are also processed** to generate rate and pulse interval (time-between pulses) data.

Counter Modules Specifications

	1734-IJ	1734-IK	1734-VHSC24	1734-VHSC5
Number of Counters	1			
Number of Compare Windows	—		4	
Output Groups	—		1 group of 2	
Input Frequency, Max.	1.0 MHz counter and encoder X1 configurations (no filter) 500 kHz encoder X2 configuration (no filter) 250 kHz encoder X4 configuration (no filter)			
Voltage, On-State Input, Nom.	5V dc	24V dc		5V dc
Output Delay Time, OFF to ON	—		25 μ s (load dependent)*	
Current, On-State Input, Min.	\geq 5 mA			
Terminal Base Unit	1734-TB or 1734-TBS			
PointBus Current (mA)	160		180	
Power Dissipation, Max.	1.1 W @ rated load	1.5 W @ rated load	1.9 W @ rated load	1.5 W @ rated load

*OFF to ON delay is time from a valid output "on" signal to output energization.

The counter modules serve as signal conditioners and function blocks (that is, counters) between the customer process signals on the mounting base and the POINTBus backplane containing the command information. The three main functional blocks are the customer digital I/O interface, the counter ASIC, and the microprocessor.

The counter modules accept feedback from:

- Encoders (either single-ended or differential)
- Pulse generators
- Mechanical limit switches
- Frequencies up to 1 MHz

A filter is available with four settings:

- 50 Hz
- 500 Hz
- 5 kHz
- 50 kHz

The filter can be turned off to achieve the fastest counting rate.

The input voltage range is 5V dc (1734-IJ and 1734-VHSC5) or 15 to 24V dc (1734-IK and 1734-VHSC24). The module returns the count or frequency in the form of a 24-bit binary number (0 to 16,777,215) expressed in a 32-bit word. Each counter has a user-selectable preset and rollover value associated with it.

The counter modules operate in the following modes.

- Counter mode - read incoming single-phase pulses, return a binary count
- Encoder mode - read incoming two-phase quadrature pulses, return a binary count
- Period/rate mode - count internal clocks during the on period, return a frequency (1734-VHSC24 and 1734-VHSC5 outputs are updated only at the end of the period)
- Continuous/rate mode - count internal clocks during the on period, return a frequency (1734-VHSC24 and 1734-VHSC5 outputs are updated continuously during this period)
- Rate measurement mode - read pulses during the sample period, return a frequency
- Pulse width modulation (PWM) mode - generate a pulse width modulated signal (1734-VHSC24 and 1734-VHSC5 only)
- Pulse generator mode - generates a pulse of defined width, returns width and quantity of trigger (1734-VHSC24 and 1734-VHSC5 only)

The operation of the counter and encoder modes is nearly identical. The difference between the two modes is in the type of feedback (one-phase versus two-phase) for the count direction (up or down). In encoder mode, a transition is expected on B for counting to proceed in a direction, whereas, in counter mode, the B input may be left at a static level. All operating modes are selected by writing appropriate configuration data to the module.

1734-IJ and 1734-IK Specifications


	1734-IJ	1734-IK
Voltage Category/Type, Input	5V dc A/Areturn, B/Breturn, Z/Zreturn	24V dc A/Areturn, B/Breturn, Z/Zreturn
Current, Off-State Input, Max.	≤0.250 mA	≤0.250 mA
Voltage, Off-State Input, Max.	≤1.25V dc	≤1.8V dc
Current, On-State Input, Max.	25.7 mA @ 6V dc 19.1 mA @ 5V dc	6.1 mA @ 15V dc or 10.2 mA @ 24V dc
Voltage, On-State Input, Min.	≥2.6V dc	≥12.5V dc
Voltage, On-State Input, Max.	≤6V dc	Refer to input derating curve
Input Filter Selections, per A/B/Z group	Off 10 μs (50 kHz) 100 μs (5 kHz) 1.0 ms (500 Hz) 10.0 ms (50 Hz)	Off 10 μs (50 kHz) 100 μs (5 kHz) 1.0 ms (500 Hz) 10.0 ms (50 Hz)
Keyswitch Position	2	2
Thermal Dissipation, Max.	3.75 BTU/hr @ rated load	5.1 BTU/hr @ rated load
Isolation Voltage	240V, Basic Insulation Type Tested at 1100 V dc for 60 seconds, I/O to system	240V, Basic Insulation Type Tested at 1100 V dc for 60 seconds, I/O to system
External DC Power Supply Voltage, Nom.	No additional external power required to power module	No additional external power required to power module
Installation Instructions	1734-IN005	1734-IN006
User Manual	1734-UM006	1734-UM006

1734-VHSC24 and 1734-VHSC5 Specifications

	1734-VHSC24	1734-VHSC5
Voltage Category/Type, Input	24V dc	5V dc
Current, Off-State Input, Max.	≤0.250 mA	≤0.250 mA
Voltage, Off-State Input, Max.	≤1.8V dc	≤1.25V dc
Current, On-State Input, Max.	10.2 mA @ 24V dc or 6.1 mA @ 15V dc	25.7 mA @ 6V dc 19.1 mA @ 5V dc
Voltage, On-State Input, Min.	≥12.5V dc	≥2.6V dc
Voltage, On-State Input, Max.	Refer to input derating curve	≥2.6V dc
Input Filter Selections	Off 10 μs (50 kHz) 100 μs (5 kHz) 1.0 ms (500 Hz) 10.0 ms (50 Hz)	Off 10 μs (50 kHz) 100 μs (5 kHz) 1.0 ms (500 Hz) 10.0 ms (50 Hz)
Input Frequency, Max.	1.0 MHz counter and encoder X1 configurations (no filter) 500 kHz encoder X2 configuration (no filter) 250 kHz encoder X4 configuration (no filter)	1.0 MHz counter and encoder X1 configurations (no filter) 500 kHz encoder X2 configuration (no filter) 250 kHz encoder X4 configuration (no filter)
Keyswitch Position	2	2
Thermal Dissipation, Max.	6.5 BTU/hr @ rated load	5.1 BTU/hr @ rated load
Isolation Voltage	240V, Basic Insulation Type Tested at 1100 V dc for 60 seconds, I/O to system	240V, Basic Insulation Type Tested at 1100 V dc for 60 seconds, I/O to system
External DC Power Supply Voltage, Nom.	No additional external power required to power module*	No additional external power required to power module*

*Does not represent power required to supply outputs.

1734-VHSC24 Input Derating Curve

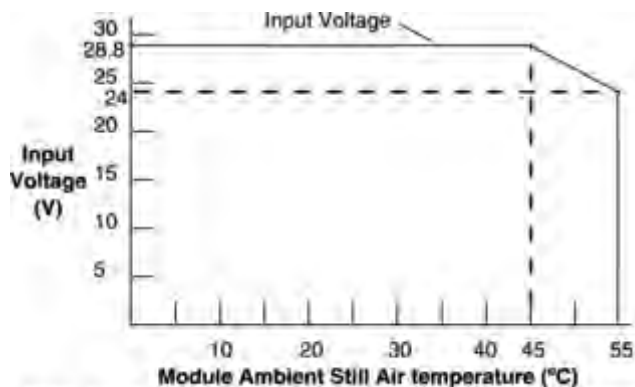

Note: Exceeding the maximum input voltage can cause permanent damage to the input.

Step 3 - Select:

- *the appropriate terminal base unit for your module*

Select a Terminal Base Assembly

The POINT I/O wiring system supports:

- removal and insertion under power.
- pluggable terminations.
- vibration-proof operation to 5 g.
- screw-cage and spring-clamp terminations.
- 5 x 5 marker card system.

The POINT I/O system follows a No Tools design approach. The mounting base, I/O module, and removable terminal block (1734-RTB) may be assembled as a system without tools. The POINT I/O mounting base mounts directly on the DIN-rail, either vertically or horizontally.

The mounting base forms the interconnect for the POINTBus backplane communication and field power-bus distribution. The mechanical keying of the mounting base prevents incorrect module placement. The mounting base and RTBs are sold together (preassembled) as a single unit called a Terminal Base Assembly.

Terminal Base Assembly	Description
1734-TB	Pre-assembled mounting base and 8-terminal cage-clamp RTB
1734-TBS	Pre-assembled mounting base and 8-terminal spring-clamp RTB
1734-TB3	Pre-assembled mounting base and 12-terminal cage-clamp RTB
1734-TB3S	Pre-assembled mounting base and 12-terminal spring-clamp RTB
1734-TBCJC*	Pre-assembled mounting base and cold-junction compensation RTB

* Use the cold-junction compensation terminal base assembly with the 1734-IT2I thermocouple input module.

The pins on the 1734-TB terminal base assembly are independent of each other. Pins 4, 5, 8, and 9 as well as 6, 7, 10, and 11 are connected together on the 1734-TBS terminal base assembly. The connections for the 1734-TB and 1734-TB3 are determined by the 1734 module being used.

1734-TB		1734-TB3	
0	1	0	1
2	3	2	3
4	5	4	5
6	7	6	7
		8	9
		10	11

Pins 4, 5, 8, and 9 are connected together.
Pins 6, 7, 10, and 11 are connected together.


Removable Terminal Blocks (RTBs)

The removable terminal blocks (RTBs) provide 8 or 12 separate terminal locations for field wiring. They also provide vertical access to wire and screw terminations. Each terminal is numbered and a separate terminal point is provided for each wire, including a shield ground terminal point for 2-point analog modules.

Once the RTB is wired properly, you never need to rewire terminations. RTBs separate independently of the base and I/O module to facilitate rapid installation and commissioning of the system, whether it's one loop or one sub-system at a time. Each terminal is numbered on the bottom of the RTB to simplify troubleshooting during commissioning or maintenance cycles.

Cat. No.	Terminal Base Screw Torque, Metric	Terminal Base Screw Torque, Imperial
1734-RTB	0.6 N•m	7 lb•in
1734-RTBS		
1734-TB3		
1734-TB3S		
1734-RTBCJC*	0.5...0.6 N•m	5...7 lb•in

*Use the 1734-TBCJC wiring base assembly with the 1734-IT2I thermocouple input module.

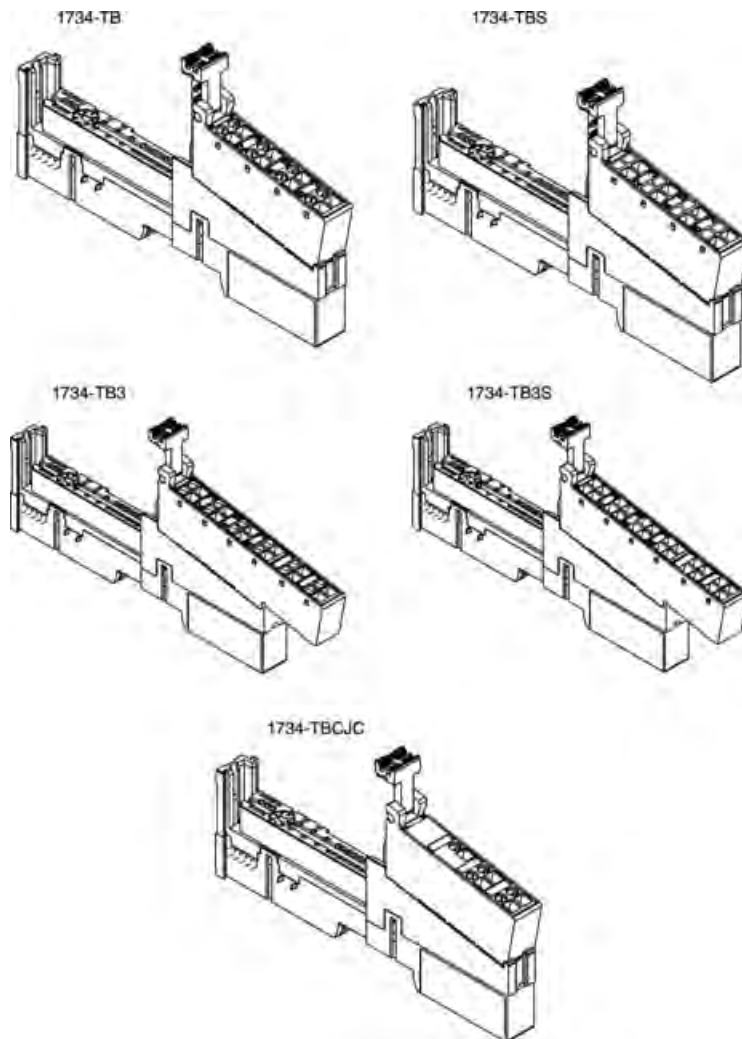

Step 4 - Select:

- *the appropriate power unit*

Select a Power Supply Unit

POINT I/O adapters have built-in POINTBus power supplies. All POINT I/O modules are powered from the POINTBus backplane by either an adapter or expansion power supply.

Power Specifications

Cat. No.	Input Voltage, Nom.	Input Voltage Range	Field Side Power Requirements	Inrush Current	PointBus Current (mA)	Input Overvoltage Protection	Interruption
1734-PDN	24V dc	11...25V dc DeviceNet specification	24V dc (+4% = 25V dc) @ 400 mA	6 A for 5 ms	1300*	Reverse polarity protected	—
1734D Series	24V dc	11...25V dc DeviceNet specification	24V dc (+4% = 25V dc) @ 350 mA	6 A for 5 ms	1000	Reverse polarity protected	—
1734-ADN(X)	24V dc	10...28.8V dc	24V dc (+20% = 28.8V dc) @ 400 mA	6 A for 10 ms	1000‡	Reverse polarity protected	Output voltage will stay within specifications when input drops out for 10 ms at 10V with max. load.
1734-ACNR	24V dc	10...28.8V dc	24V dc (+20% = 28.8V dc) @ 425 mA	6 A for 10 ms	1000‡	Reverse polarity protected	Output voltage will stay within specifications when input drops out for 10 ms at 10V with max load.
1734-AENT	24V dc	10...28.8V dc	24V dc (+20% = 28.8V dc) @ 400 mA	6 A for 10 ms	700§	Reverse polarity protected	Output voltage will stay within specifications when input drops out for 10 ms at 10V with max load
1734-APB	24V dc	10...28.8V dc	24V dc (+20% = 28.8V dc) @ 400 mA	6 A or 10 ms	1000‡	Reverse polarity protected	Output voltage will stay within specifications when input drops out for 10 ms at 10V with max load.
1734-EP24DC	24V dc	10...28.8V dc	24V dc (+20% = 28.8V dc max) @ 400 mA	6 A for 10 ms	1300*	Reverse polarity protected	Output voltage will stay within specifications when input drops out for 10 ms at 10V with max load
1734-EPAC	120/240V ac	85...264V ac	120V ac @ 200 mA, 240V ac @ 100 mA	2 A for 6 ms	1300*	MOV and fuse protected	Output voltage will stay within specifications when input drops out for 10 ms at 85V with max load

*1300 mA @ 5V dc $\pm 5\%$ (4.75...5.25V).
 ‡1000 mA @ 5V dc $\pm 5\%$ (4.75...5.25V).
 §700 mA When Input Voltage < 17V dc.

When to Use the Field Power Distributor

Power units are divided into three categories:

- Communication adapter with built-in power supply (dc-dc)
- Expansion power supply
- Field power distributor

The 1734-FPD breaks the field power distribution at the left of the 1734-FPD from the field power distribution to the right of the 1734-FPD.


You can use the 1734-FPD field power distributor with a broad range of voltage inputs including 5 to 125V dc and 24 to 240V ac applications and I/O modules.

- Field-side voltage distribution module
- AC or DC input
- For use with all communication interfaces
- Partitioning (auxiliary power, major motion, or minor motion)
- Starts new voltage distribution point
- No backplane bus power extension (12 modules maximum) when using the 1734-PDN communication interface or 1734D POINTBlock I/O modules as they don't add power to the POINTBus backplane


The 1734-FPD field power distributor passes through all POINT I/O backplane signals, but does not provide additional POINTBus backplane power. The field power distributor gives you the ability to change the field power distribution source for I/O modules to the right of the 1734-FPD field power distributor. This facilitates logical or functional partitioning of low-channel count, high I/O-mix applications using any of the communication adapters.

Use the 1734-FPD field power distributor to isolate field power segments.


Wiring Using a 1734-FPD to Create a New AC Device Power Bus

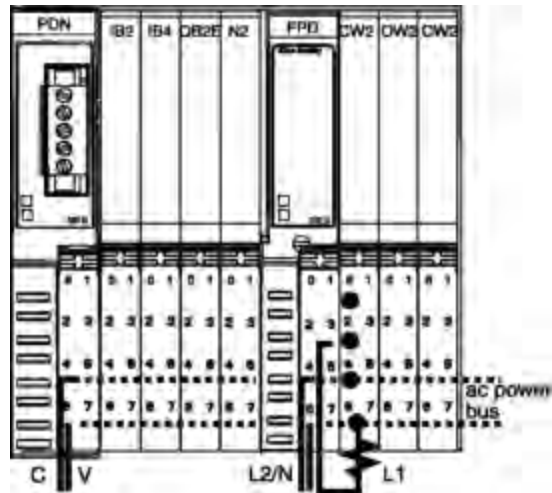

Wiring Using a 1734-FPD to Create a New Analog Device Power Bus

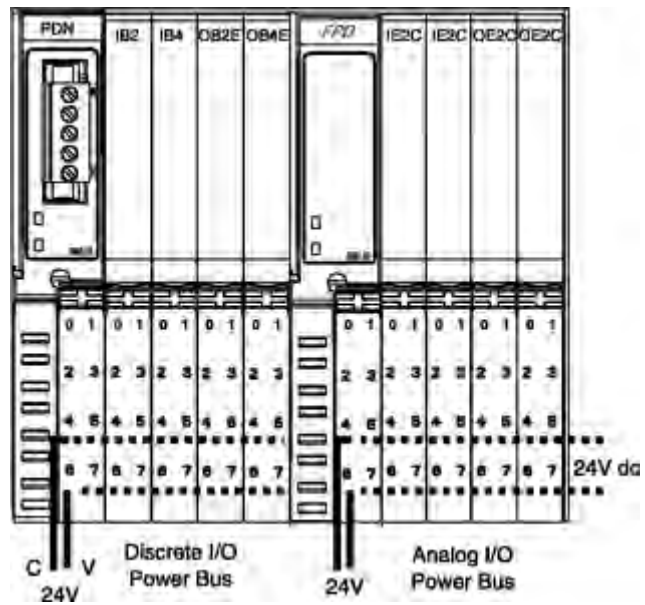

Wiring Using a 1734-FPD to Create a New DC Device Power Bus

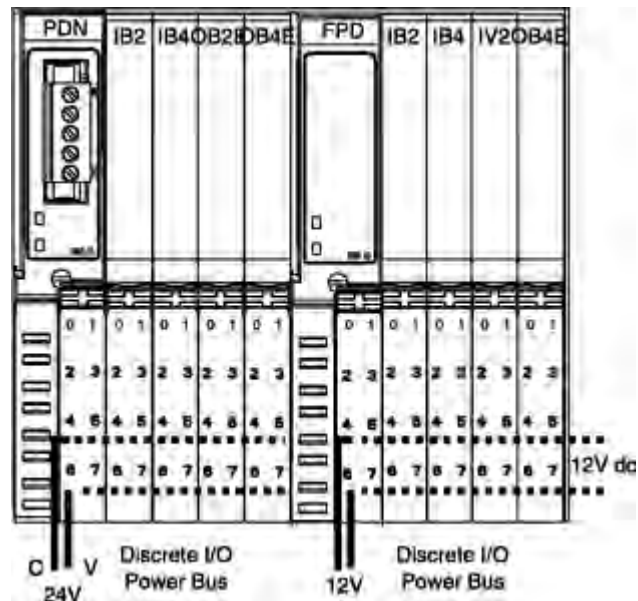

When to Use the Expansion Power Unit

The 1734-EP24DC or 1734-EPAC expansion power unit provides two services:

- Breaks the field power distribution at the left of the 1734-EP24DC or 1734-EPAC from the field power distribution to the right of the 1734-EP24DC or 1734-EPAC
- Adds an additional 1.3 A of current to the POINTBus for I/O modules to the right of the 1734-EP24DC or 1734-EPAC

The expansion power unit maintains the integrity of the POINT I/O backplane by not interrupting the POINTBus data.

The 1734-EP24DC expansion power unit passes 24V dc field power on the POINTBus backplane to the I/O modules to the right of it. The 1734-EPAC expansion power unit passes 120/240V ac field power on the POINTBus backplane to the I/O modules to the right of it. These units extend the backplane bus power and creates a new field voltage partition segment for driving field devices for up to 17 I/O modules. The expansion power units separate field power from I/O modules to the left of the unit, effectively providing functional and logical partitioning for:

- separating field power between input and output modules.
- separating field power to the analog and digital modules.
- grouping modules to perform a specific task or function.


You can use multiple expansion power units with the 1734-ADN, 1734-ADNX, 1734-ACNR, 1734-AENT, and 1734-APB communication adapters to assemble a full system. For instance, if you are using the 1734-ADN adapter, you can use a 1734-EP24DC or 1734-EPAC expansion power unit to add additional modules.

For example, if you had a 36 module system with a 1734-ADN adapter, you would have to add at least two or more 1734-EP24DC or 1734-EPAC expansion power units to provide more POINTBus current for modules to the right of the supply.


- 24 to 5V dc converter (1734-EP24DC)
120/240V ac to 5V dc converter (1734-EPAC)
- 1.3 A, 5V dc output (extend backplane power)
- For use with adapters only
(not with 1734-PDN communication interface)
(not with 1734D series modules)
- Starts new voltage distribution
- Partitioning
- Dark-gray color for easy visual inspection and identification

You can use the 1734-EP24DC or 1734-EPAC expansion power units only with POINT I/O adapters. Do not use it with the 1734-PDN or 1734D series communication interfaces.


1734-EP24DC Current Derating for Mounting

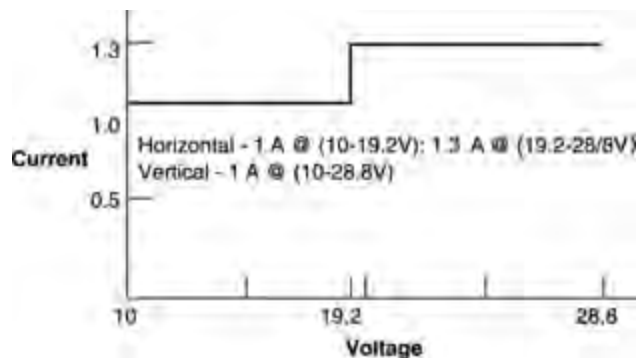


1734-EPAC Current Derating for Mounting

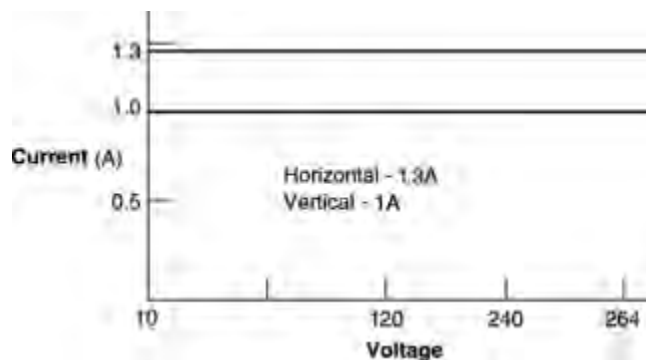


Example of Continuing Power to Field Devices

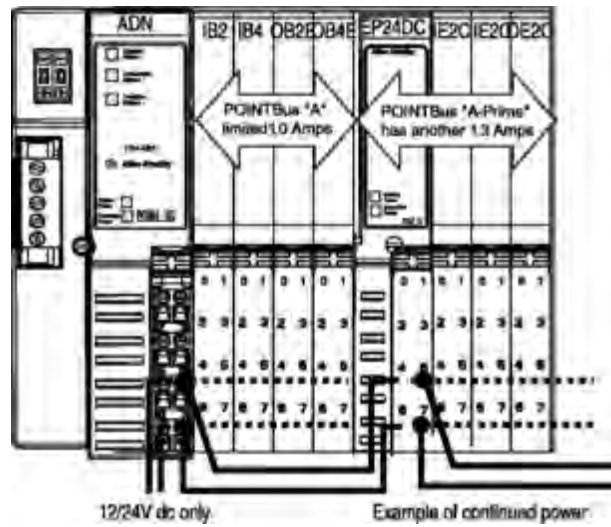

Example of Logical Partitioning

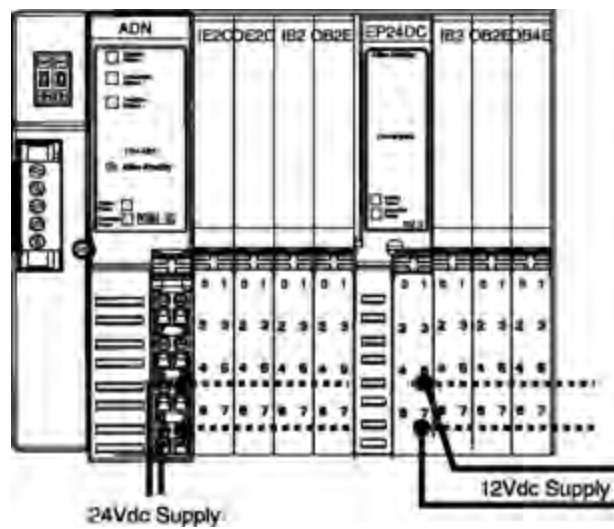

Example of Functional Partitioning

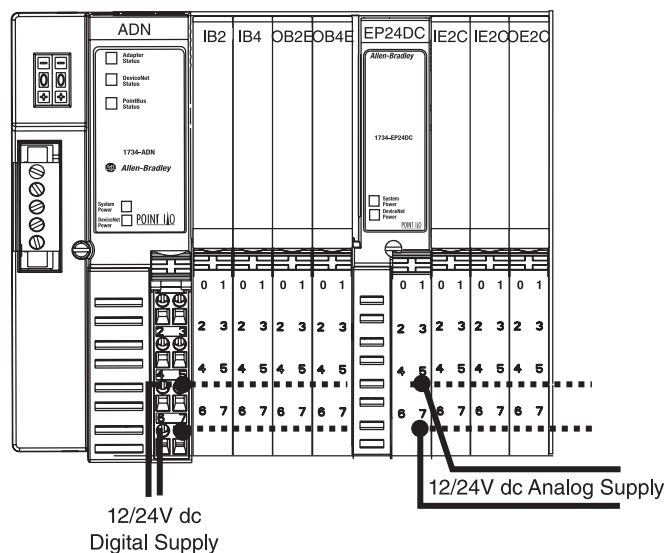

Power Distribution General Specifications

	1734-FPD	1734-EP24DC	1734-EPAC
Field Side Power Requirements, Max.	—	24V dc (+20% = 28.8V dc max) @ 400 mA	120V ac @ 200 mA, 240V ac @ 100 mA
Inrush Current, Max.	—	6 A for 10 ms	2 A for 6 ms
PointBus Output Current Rating	—	Horizontal mounting: 1 A @ 5V dc for 10...19.2V input; 1.3 A @ 5V dc for 19.2...28.8V input Vertical mounting: 1 A @ 5V dc for 10...28.8V input	Horizontal DIN rail mounting - 1.3 A @ 5.2V dc Vertical DIN rail mounting - 1.0 A @ 5.2V dc
Overvoltage Protection, Inputs	—	Reverse polarity protected	MOV and fuse protected
Power Supply Interruption Protection	—	Output voltage will stay within specifications when input drops out for 10 ms at 10V with max load	Output voltage will stay within specifications when input drops out for 10 ms at 85V with max load
Power Supply Input Voltage, Nom.	12V/24V dc 120V/220V ac	24V dc	120/240V ac
Operating Voltage Range	10...28.8V dc 120V/240V ac	10...28.8V dc	85...264V ac
Power Consumption, Max.	None	9.8 W @ 28.8V dc	15.1 W @ 264V ac
Power Dissipation, Max.	None	3.0 W @ 28.8V dc	8.4 W @ 264V ac
Thermal Dissipation, Max.	None	10.0 BTU/hr @ 28.8V dc	28.7 BTU/hr @ 264V ac
Isolation Voltage	Continuous-voltage withstand rating: 50V continuous, tested to withstand 2600V dc for 60 s	1250V rms	264V continuous, tested to withstand 3250V dc for 60 s
Field Power Bus Supply Voltage, Nom.	12V dc, 24V dc, (10...28.8V dc range) 120V ac, 240V ac 50/60 Hz	12V dc or 24V dc	120...240V ac
Field Power Bus Supply Current, Max.	10 A	10 A	10 A

Step 5 - Select:

- *optional POINT I/O marker card*

Select POINT I/O Accessories

Marker Card

The POINT I/O Marker Card is available under catalog number 1492-SM5X5. Each kit contains five 12.7 x 12.7 cm (5 x 5 in.) cards with 100 markers per card. You can enter text on the marker cards using different font sizes and text widths; you can print multiple lines on one marker card; you can even print common symbols.

Step 6 - Select:

- *appropriate number of DIN rails based on the number of modules and the physical requirements*

Place POINT I/O Modules

Determine Mounting Requirements

The producer/consumer model multicasts messages. This means that multiple nodes can consume the same data at the same time from a single device. Where you place I/O modules in the control system determines how the modules exchange data.

DIN rail should be securely fastened every 200 mm (7.87 in.).

For a Rockwell Automation controller to control 1734 I/O, the I/O must be:

- on the same network as the controller.
- or**
- on a ControlNet network that is local to that controller.
- or**
- on an EtherNet/IP network that is local to that controller.

Maximum Size Layout

	PointBus Current (mA)	Max I/O Modules with 24V dc Backplane Current at 75 mA each	Max I/O Modules with Expansion Power Supplies	Max Number of I/O Module Connections
1734-PDN on DeviceNet network	1300	Up to 17	Expansion power supply not allowed	Not to exceed scanner capacity
1734D POINTBlock on DeviceNet network	1000	Up to 13		
1734-ADN(X) on DeviceNet network	1000			
1734-ACNR on ControlNet network	1000			
1734-AENT on EtherNet/IP network	1000			
1734-APB on PROFIBUS network	1000		63	5 rack and 20 direct 20 total connections including rack and direct
1734-EP24DC Expansion Power	Horizontal mounting: 1 A @ 5V dc for 10...19.2V input; 1.3 A @ 5V dc for 19.2...28.8V input Vertical mounting: 1 A @ 5V dc for 10...28.8V input	Up to 17		Not to exceed scanner capacity
1734-EPAC Expansion Power	Horizontal DIN rail mounting - 1.3 A @ 5.2V dc Vertical DIN rail mounting - 1.0 A @ 5.2V dc	Up to 17		

Power Supply Distance Rating

Place modules to the right of the power supply. Each 1734 I/O module can be placed in any of the slots right of the power supply until the usable backplane current of that supply has been exhausted. An adapter provides 1 A current to the POINTBus backplane. The 1734-EP24DC or 1734-EPAC provides up to 1.3 A and I/O modules require from 75 mA (typical for the digital and analog I/O modules) up to 220 mA or more.

Mount the POINT I/O System


Mount the POINT I/O system on a DIN rail in the horizontal or vertical orientation.

Use steel, 35 x 75.5 mm DIN rails (A-B part number 199-DR1; 46277-3; EN 50022). The DIN rails for all POINT I/O system components must be mounted on a common, conductive surface to ensure proper electro-magnetic interference (EMI) performance.


Approximate Mounting Dimensions

Secure DIN rail approximately every 200 mm (7.87 in).


POINT I/O with 1734-PDN Mounting Dimensions

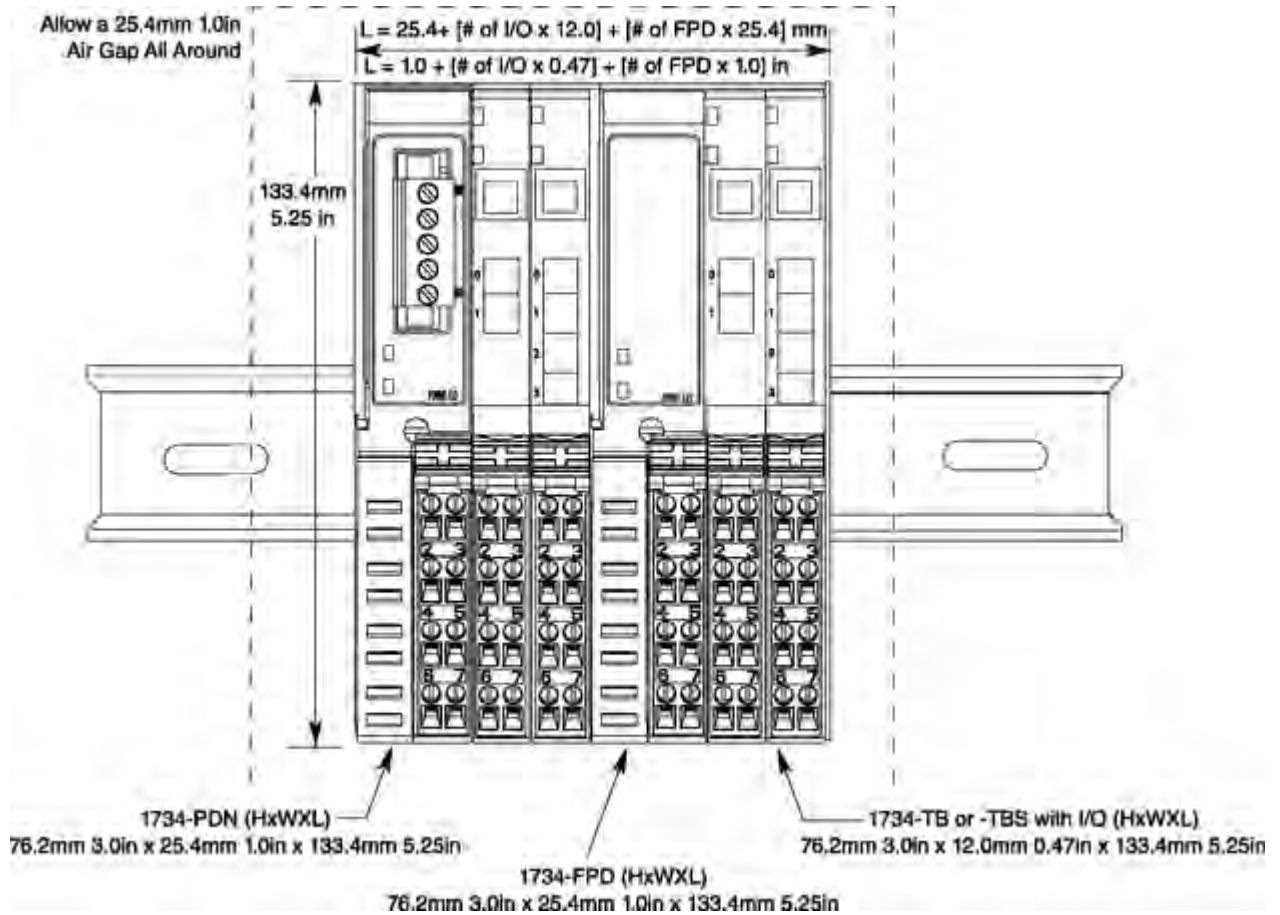

1734D POINTBlock Mounting Dimensions

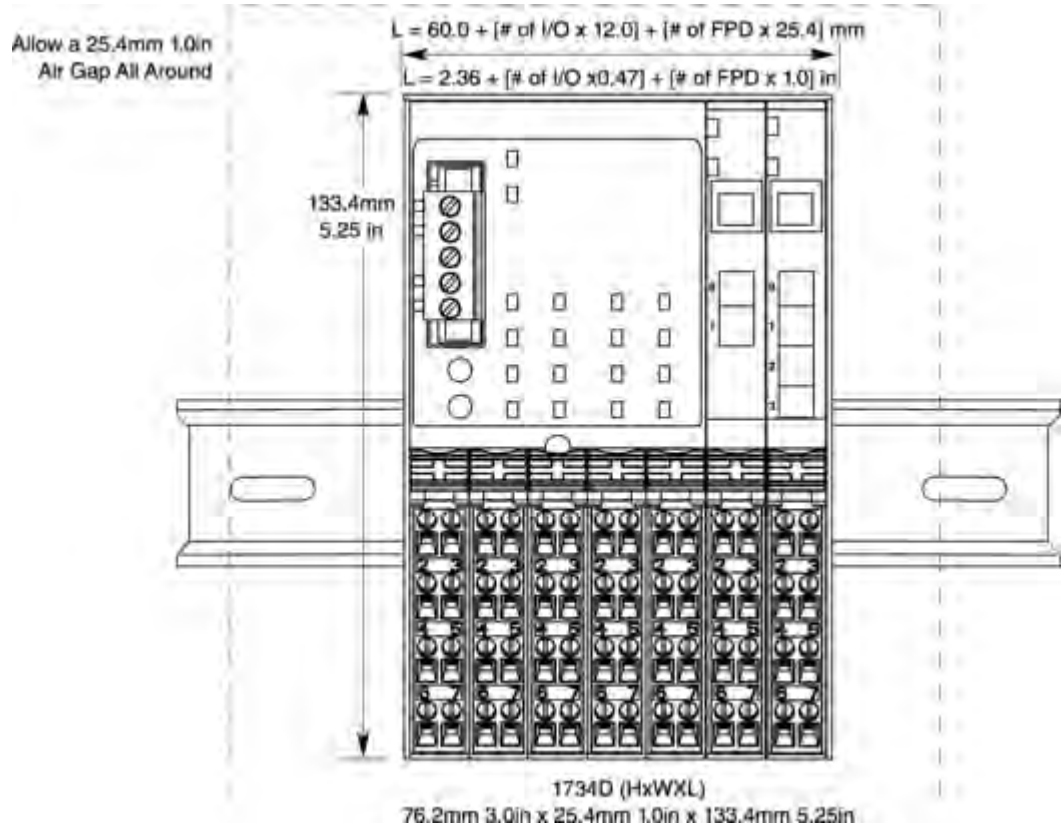

POINT I/O with 1734-ADN(X), 1734-ACNR, 1734-AENT, 1734-APB Mounting Dimensions

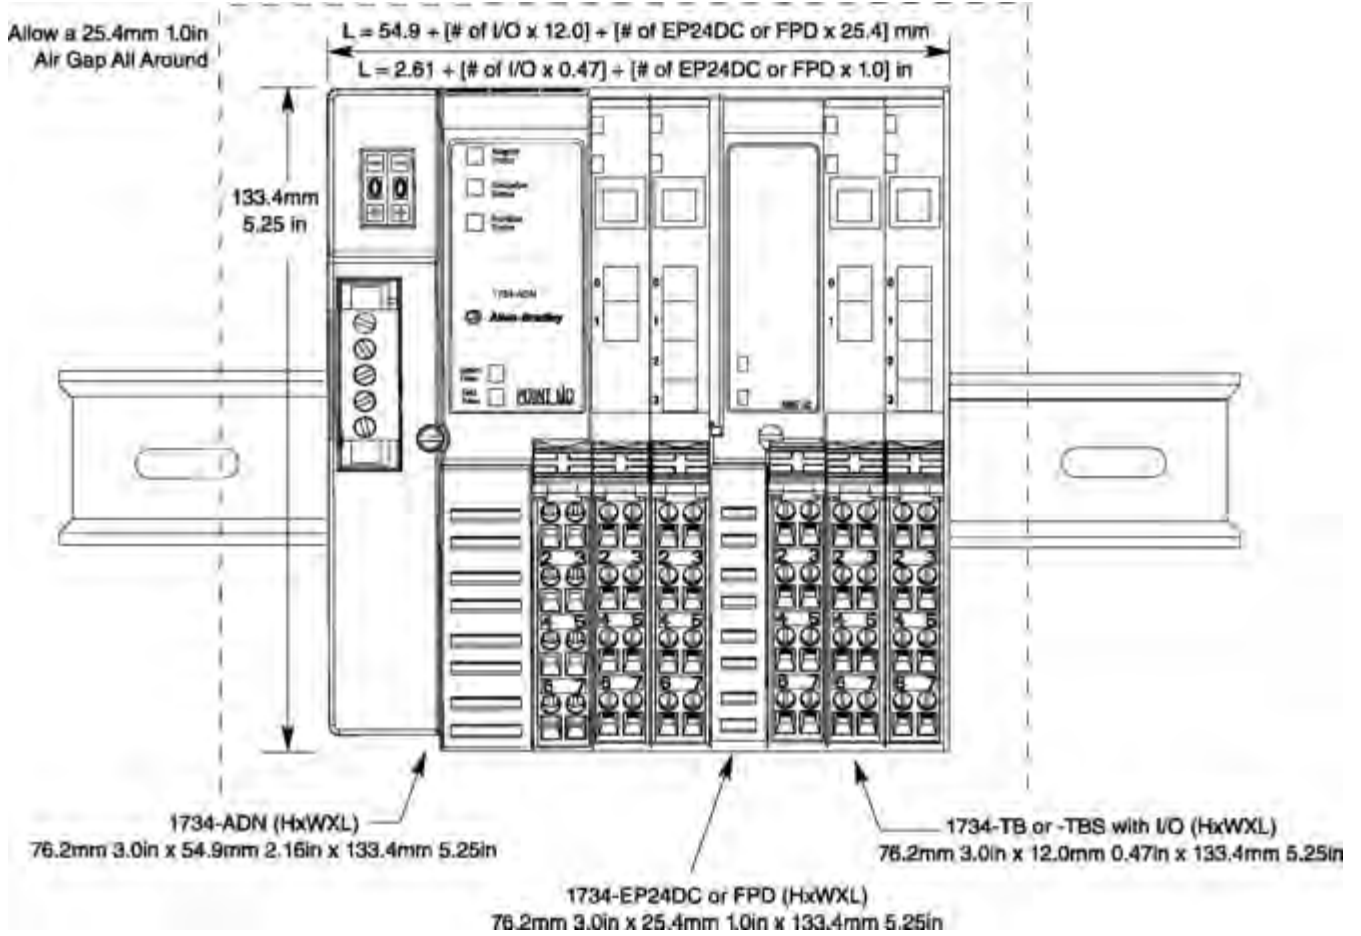

Summary

As you select devices for your POINT I/O system, keep these things in mind.

✓	Step	Remember to Select
	<p>1 Select a communication interface</p> <p>Choose the interface module for your operating system.</p>	<ul style="list-style-type: none"> the appropriate interface module a communication interface that meets the power requirements of your system
	<p>2 Select I/O devices based on field devices</p> <ul style="list-style-type: none"> location of the device number of points needed appropriate catalog number number of points available per module number of modules 	<ul style="list-style-type: none"> I/O modules - some have diagnostic features, electronic fusing, isolated inputs/outputs, and unique configurable features
	<p>3 Select a wiring base assembly</p> <p>Choose the appropriate wiring base assembly with removable terminal block for your modules.</p>	<ul style="list-style-type: none"> the appropriate wiring base assembly
	<p>4 Select optional power components</p> <p>Choose optional components to extend backplane power or change the field power distribution source.</p>	<ul style="list-style-type: none"> additional power components as necessary adequate power capacity to meet I/O module backplane current requirements
	<p>5 Select optional accessories</p> <p>Choose the marker kit as necessary.</p>	<ul style="list-style-type: none"> the marker kit, if necessary
	<p>6 Determine mounting requirement</p> <p>Determine needed dimensions based on the communication interface chosen.</p>	<ul style="list-style-type: none"> the appropriate number of DIN-rails based on the number of modules and the physical locations of those modules horizontal or vertical mounting with no thermal derating

Related Documentation

Additional user documentation presents information according to the tasks you perform and the programming environment you use. Refer to this table for information on 1734 POINT I/O products.

POINT I/O Related Publications*

	Cat. No.	Description	Pub.No.
General Information		DeviceNet Media (Media, Sensors and Distributed I/O) Catalog Guide	1485-CG001
		DeviceNet Adapter Quick Start	1734-QS002
		ControlNet Media	AG-PA002
		EtherNet/IP Performance and Application Guide	ENET-AP001
		Industrial Automation Wiring and Grounding Guidelines	1770-4.1
		Allen-Bradley Terminal Marking System Product Profile	1492-1.18
		Literature Library	http://www.literature.rockwellautomation.com
Communication Interfaces	1734-ADN(X)	POINT I/O DeviceNet Adapter Module	1734-IN007 1734-UM002
	1734-PDN	POINT I/O DeviceNet Communication Interface Module	1734-IN057
	1734-AENT	EtherNet/IP Communication Adapter Module	1734-UM010
	1734-ACNR	POINT I/O Redundant ControlNet Adapter Module	1734-IN582 1734-UM008
	1734-APB	POINT I/O PROFIBUS Adapter Module	1734-IN014 1734-UM005
Digital and Analog	1734 Series	Digital and Analog Modules	1734-UM001
AC	1734-IA2	120V ac 2 Input Module	1734-IN010
	1734-IM2	220V ac 2 Input Module	1734-IN008
	1734-OA2	120/220V ac 2 Output Module	1734-IN009

* Contact your local A-B distributor for information on ordering any of the above publications.
For electronic copies of these publications, go to: <http://www.literature.rockwellautomation.com>

POINT I/O Related Publications*

	Cat. No.	Description	Pub.No.
DC	1734-IB2	24V dc 2 Input Sink Module	1734-IN051
	1734-IB4	24V dc 4 Input Sink Module‡	
	1734-IB8	24V dc 8 Input Sink Module	
	1734-IV2	24V dc 2 Input Source Module‡	1734-IN052
	1734-IV4	24V dc 4 Input Source Module	
	1734-IV8	24V dc 8 Input Source Module	
	1734-OB2E	24V dc 2 Output Source Module with Diagnostics‡	1734-IN056
	1734-OB2E	24V dc 2 Output Source Module with Diagnostics	
	1734-OB2EP	24V dc Electronically Protected 2 Output Source Module‡	
	1734-OB4	24V dc 4 Output Source Module	
	1734-OB4E	24V dc 4 Point Output Module with Diagnostics	
	1734-OB8	Point I/O 24V dc 8 Output Source Module	
	1734-OB8E	24V dc 8 Point Output Module with Diagnostics	1734-IN585
	1734-OV2E	24V dc 2 Output Sink Module with Diagnostics	
	1734-OV4E	24V dc 4 Output Sink Module with Diagnostics	
	1734-OV8E	24V dc Protected 8 Output Sink Module	
Analog	1734-IE2C	24V dc Analog 2 Current Input Module	1734-IN053
	1734-IE2V	24V dc Analog 2 Voltage Input Module	1734-IN001
	1734-OE2C	24V dc Analog 2 Channel Current Output Module	1734-IN054
	1734-OE2V	24V dc Analog 2 Channel Voltage Output Module	1734-IN002
	1734-IR2	2 Channel Single-ended Input RTD Module	1734-IN012
	1734-IT2I	2 Channel Isolated Differential Input Thermocouple Module	1734-IN002

* Contact your local A-B distributor for information on ordering any of the above publications.
For electronic copies of these publications, go to: <http://www.literature.rockwellautomation.com>

POINT I/O Related Publications*

	Cat. No.	Description	Pub.No.
Serial Interface Modules	1734-232ASC/-485ASC	RS-232, -422, and -485 ASCII Modules	1734-IN588
			1734-UM009
Serial Interface Modules	1734-SSI	Synchronous Serial Interface Module with Absolute Encoder	1734-IN581
			1734-UM007
Counters	1734-IK	24V Encoder/Counter Module	1734-IN006
			1734-UM006
	1734-IJ	5V Encoder/Counter Module	1734-IN005
			1734-UM006
1734-VHSC24	24V dc Very High Speed Counter Module	1734-IN003	
		1734-UM003	
1734-VHSC5	5V dc Very High Speed Counter Module	1734-IN004	
		1734-UM003	
Bases	1734-TB	Wiring Base Assembly with 8 Point Cage-Clamp Removable Terminal Block	1734-IN511
	1734-TB3	Wiring Base Assembly with 12 Point Cage-Clamp Removable Terminal Block	1734-IN013
	1734-TBCJC	Cold Junction Compensation Wiring Base Assembly	1734-IN583
Power Units	1734-FPD	Field Potential Distributor Module	1734-IN059
	1734-EP24DC	24V dc Expansion Power Supply	1734-IN058
	1734-EPAC	120/240V ac Expansion Power Supply	1734-IN017

* Contact your local A-B distributor for information on ordering any of the above publications.
For electronic copies of these publications, go to: <http://www.literature.rockwellautomation.com>

POINT I/O, POINTBus, POINTBlock, PLC-5, SLC 500, Logix, NetLinx, PanelView, RSLinx, RSNetWorx, and SoftLogix are trademarks of Rockwell Automation, Inc.

Trademarks not belonging to Rockwell Automation are property of their respective companies.

www.rockwellautomation.com

Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

Europe/Middle East/Africa: Rockwell Automation, Vorstlaan/Boulevard du Souverain 36, 1170 Brussels, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846